AVH-910

SERVICE MANUAL

AEP Model
UK Model
E Model

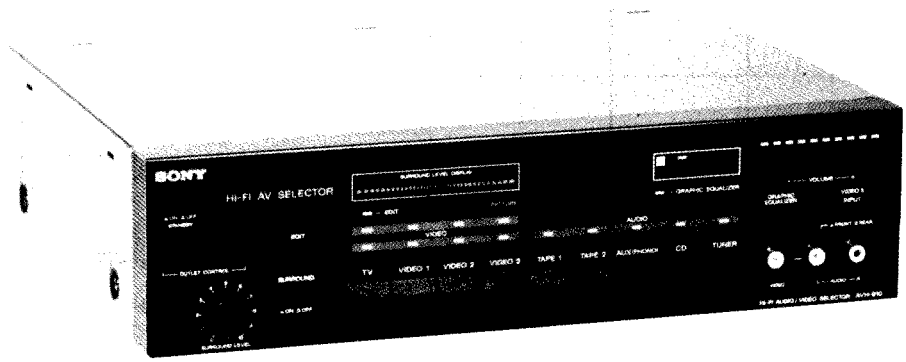

SPECIFICATIONS

Video input/output	Input capacity: 1.5 V p-p Output level: 1 ± 0.1 V p-p at 1 V p-p input Impedance: Unbalanced 75 ohm Sync: negative Signal-to-noise ratio: 50 dB Crosstalk: 40 dB (3.58 MHz)
Audio input/output	Input capacity: 4 V Gain: 0 dB (1 kHz) Frequency response: 20 Hz – 100 kHz $^{+0}_{-3}$ dB Input impedance: 50 kilohms Signal-to-noise ratio: 95 dB Output impedance: 1 kilohms Separation: 50 dB Crosstalk: 60 dB
Power requirements	AEP model: 220 V ac UK model: 240 V ac E model: 120, 220 or 240 V ac, adjustable
Power consumption	18 watts
AC outlet	1 switched, 300 watts max.
Dimensions	Approx. 355 × 95 × 290 mm (w/h/d) (14 1/8 × 3 3/4 × 11 1/2 inches) incl. projecting parts and controls
Weight	Approx. 3.5 kg (7 lb 12 oz) (AEP, UK model) Approx. 3.7 kg (8 lb 3 oz) (E model)

0 dB = 0.775 V

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY SHADING AND MARK ⚠ ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

FEATURES

The AVH-910 is a hi-fi audio/video selector that allows you to choose very quickly and easily from a variety of audio-video program sources — CD (Compact Disc), TV, tape, hi-fi Video, and more.

System selector for the AV era
The AVH-910 has 11 input/output terminals — 5 for audio equipment, four for video equipment, and one for a monitor TV. It also has a terminal for connecting a graphic equalizer and, on the front panel, video input terminals for a portable VTR.
Simply by pressing the appropriate input select button, the system is turned on and the desired audio and/or video program source is selected.

One-touch operation of a total AV system with the supplied RM-910/RM-910E Remote Commander
The universal commander system enables you to remotely control not only audio equipment but also a TV and VTR (for AEP, UK models).

Enjoyment of various AV sources
Audio tape dubbing, video tape editing, listening to or recording audio sources while viewing a video program, adding an audio source to a video program while editing it (audio dubbing), are all possible.

Surround Sound system
The built-in surround processor gives your living the acoustical characteristics of a movie theater or a concert hall.

Connecting an optional ST-V710L/ST-V910 stereo tuner
A built-in timer can turn the AVH-910 and off and various timer operations are possible.

HIFI-AUDIO VIDEO SELECTOR

SONY®

MICROFILM

AUD

FUNCTION OF CONTROLS

FRONT PANEL

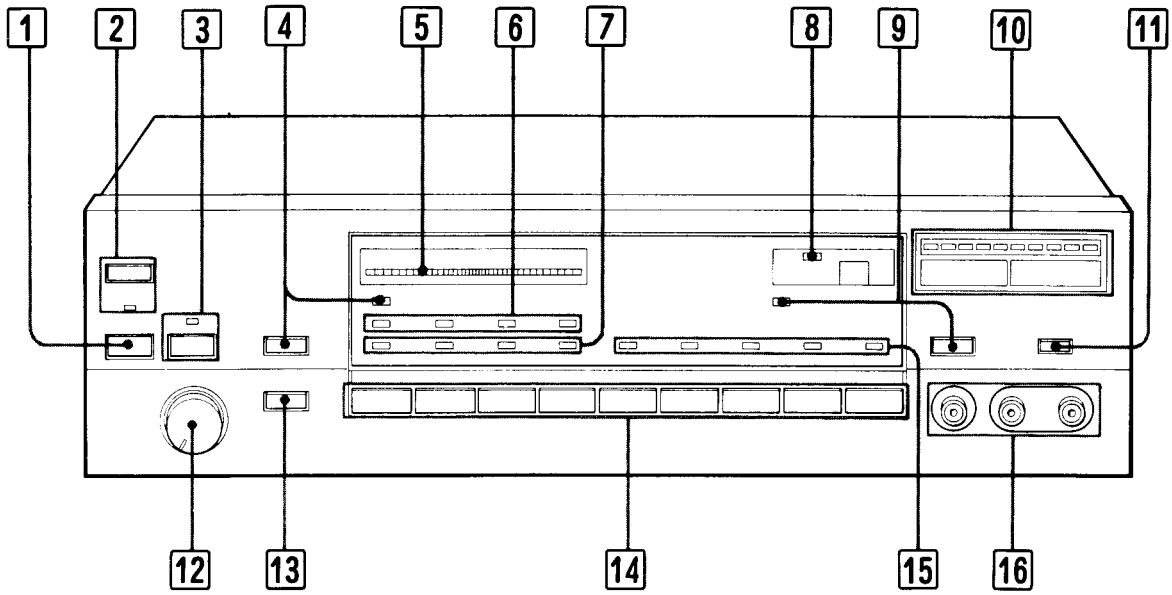

REAR PANEL

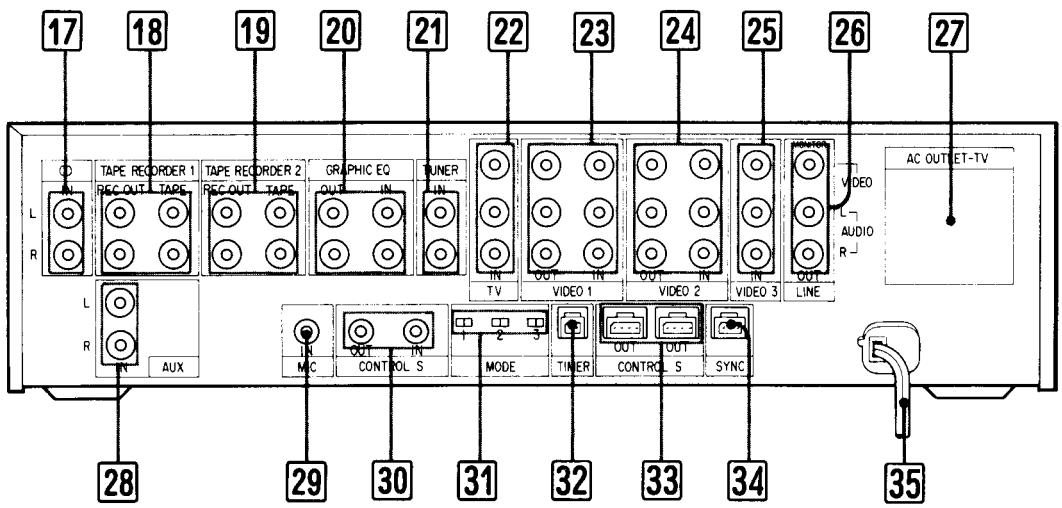

1 SYSTEM POWER switch
When the STANDBY indicator illuminates, press this switch to turn the AVH-910 and the connected equipment on and off.

2 POWER switch and STANDBY indicator
Press this switch to turn the power on. The STANDBY indicator lights and the unit is ready for remote control operation with the RM-910/RM-910E remote commander.
Press it again to turn the power off.

3 TV switch and indicator
Press this switch to turn the TV monitor or TV set on and off. The indicator illuminates when this switch is pressed.

4 EDIT switch and indicator
Press this switch to record an audio source on the connected VTR. The indicator illuminates when this switch is pressed.

[5] SURROUND LEVEL indicator
Illuminates when the SURROUND switch is pressed to indicates the surround level controlled by the SURROUND LEVEL control.

[6] Picture indicators
Indicates the video equipment being used.

[7] Sound indicators of video equipments
Illuminates when the indicated video equipment is playing audio.

[8] Remote sensor and indicator
This sensor receives an infrared beam from the supplied RM-910/RM910E remote commander.

[9] GRAPHIC EQUALIZER switch and indicator
Press this button when using a graphic equalizer. The EQ indicator will light up. Press it again to disengage it.
Note: If this button is pressed when a graphic equalizer is not connected, the sound will not be heard.

[10] VOLUME control buttons and indicators
Regulate the overall sound level. Press the + button to increase the sound level, and press – button to decrease it. The indicators show the level.

[11] VIDEO 3 INPUT select button
Press this button to select the VTR connected to the VIDEO 3 input jacks on the front panel (⊓ FRONT). Press it again to release it to select the VTR connected to VIDEO 3 input jacks on the rear panel (⊓ REAR).

[12] SURROUND LEVEL control
Ajust the surround effect with this control.

[13] SURROUND siwtch
Press this switch (⊓ ON) before adjusting the SURROUND LEVEL control.

[14] Input select buttons
Press the desired audio or video program source button. The sound indicator of the selected button illuminates.

[15] Sound indicators of audio equipment

[16] VIDEO 3 input jacks

[17] CD IN jacks (phono jack)

[18] TAPE RECORDER 1 REC OUT/TAPE jacks (phono jack)

[19] TAPE RECORDER 2 REC OUT/TAPE jacks (phono jack)

[20] GRAPHIC EQ (equalizer) OUT/IN jacks (phono jack)

[21] TUNER IN jacks (phono jack)

[22] TV AUDIO/VIDEO IN jacks (phono jack)

[23] VIDEO 1 AUDIO/VIDEO OUT/IN jacks (phono jack)

[24] VIDEO 2 AUDIO/VIDEO OUT/IN jacks (phono jack)

[25] VIDEO 3 AUDIO/VIDEO IN jacks (phono jack)

[26] LINE AUDIO/VIDEO OUT jacks (phono jack)

[27] AC OUTLET for TV (SWITCHED)

[28] AUX (auxiliary) IN jacks (phono jack)

[29] MIC (microphone) input jack (minijack)
Connect this jack to the microphone output jack of the Sony TA-V710/V910 amplifier using the supplied connecting cord.

[30] CONTROL S OUT/IN remote control jacks (minijack)
Used for remote control operation of video equipments.

[31] MODE switches
Used for remote control operation.

[32] TIMER control connector (2-pin)
Connect this to the TIMER control connector of the Sony ST-V710L/V910 timer tuner using the supplied timer control connecting cord.

[33] CONTROL S OUT remote control connectors (4-pin)
Connect to the 4-pin CONTROL S IN connector of audio equipment to operate it by remote control.

[34] SYNC (synchronized) remote control connector (3-pin)
Connect to the SYNC remote control connector of a Sony turntable system such as the PS-LX910, PS-LX70, etc. in order to synchronize the recording of a cassette-deck and a turntable system.

[35] AC power cord
See page 5 for connection.

SYSTEM CONNECTION

CONNECTION NOTES

- The power cord should be connected last of all. Before connecting it, be sure to turn the system power off.
- When connecting audio and video equipment, note that the red jacks of the AVH-910 are for right-channel audio connections, the white jacks for left-channel audio connections, and the yellow jacks for video connections.
- Insert connectors and plugs firmly, as loose connections may cause hum and noise. Also, keep connecting cords away from power cord and speaker cords to avoid hum pick-up, and keep cord away from antenna leads as this could cause both audio video reception interference.

After all the connections have been completed, turn on the system power of the connected equipment (TV monitor, CD player, VTR, etc.).

CONNECTING CORDS

For connection, use the supplied or optional connecting cords listed below. The numbers in the connection diagram are keyed to those in the list.

1

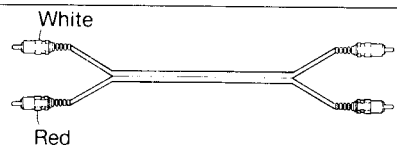

(2 phono plugs ↔ 2 phono plugs)

Supplied with the AVH-910 or other audio equipment or optional RK-74A connecting cord

2



(phono plug ↔ miniplug)

Supplied microphone connecting cord

3

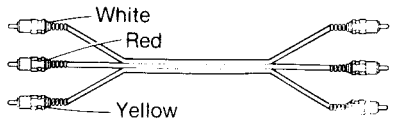

(3 phono plugs ↔ 3 phono plugs)

Optional Sony VMC-1P3 or VMC-2P3 connecting cord

or

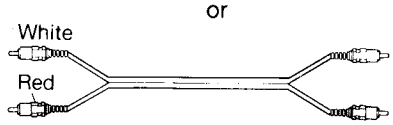

(2 phono plugs ↔ 2 phono plug)

+



(phono plug ↔ phono plug)

Optional Sony RK-74A + optional Sony VMC-1S connecting cords

4

(phono plug ↔ phono plug)

Optional Sony VMC-1S connecting cord

5



4-pin remote control cord supplied with the AVH-910 or Sony audio products equipped with CONTROL S connectors

6



3-pin remote control cord supplied with the AVH-910 or Sony audio products equipped with CONTROL S connectors

7

2-pin remote control cord supplied with the AVH-910

8



(miniplug ↔ miniplug)

Optional RK-69A connecting cord

CONNECTION DIAGRAM

AUDIO EQUIPMENT CONNECTION

To identify the connecting cords in the connection diagram, refer to the list on page 4.

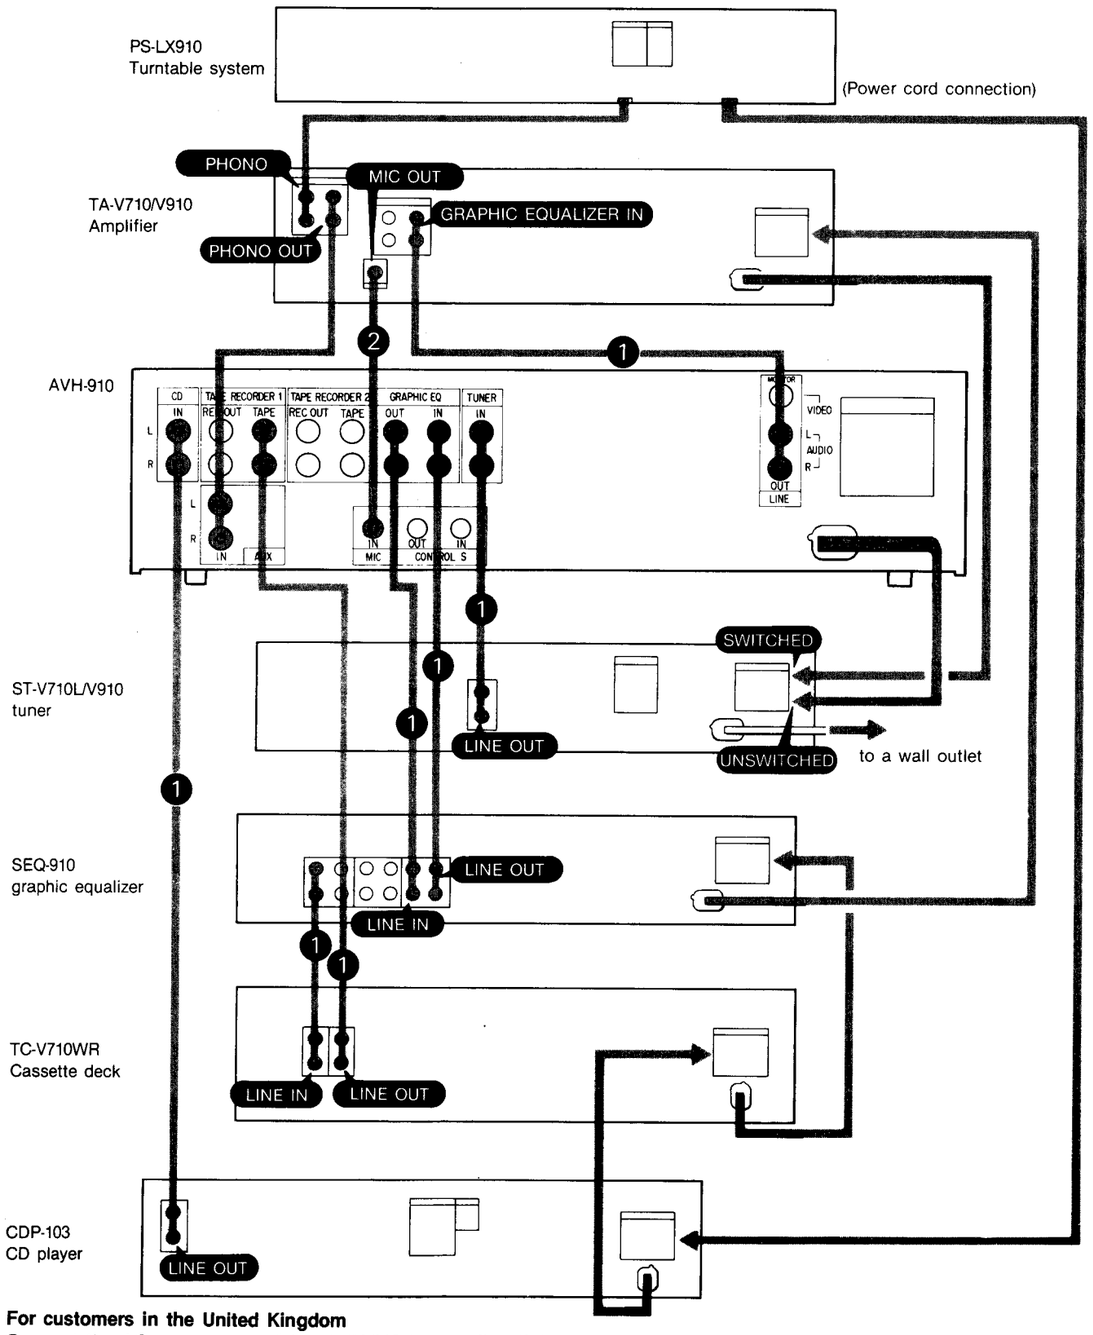

For customers in the United Kingdom
Connect the AC power cord of the AVH-910 to a wall outlet.

VIDEO EQUIPMENT CONNECTION

Connecting to a TV without video inputs

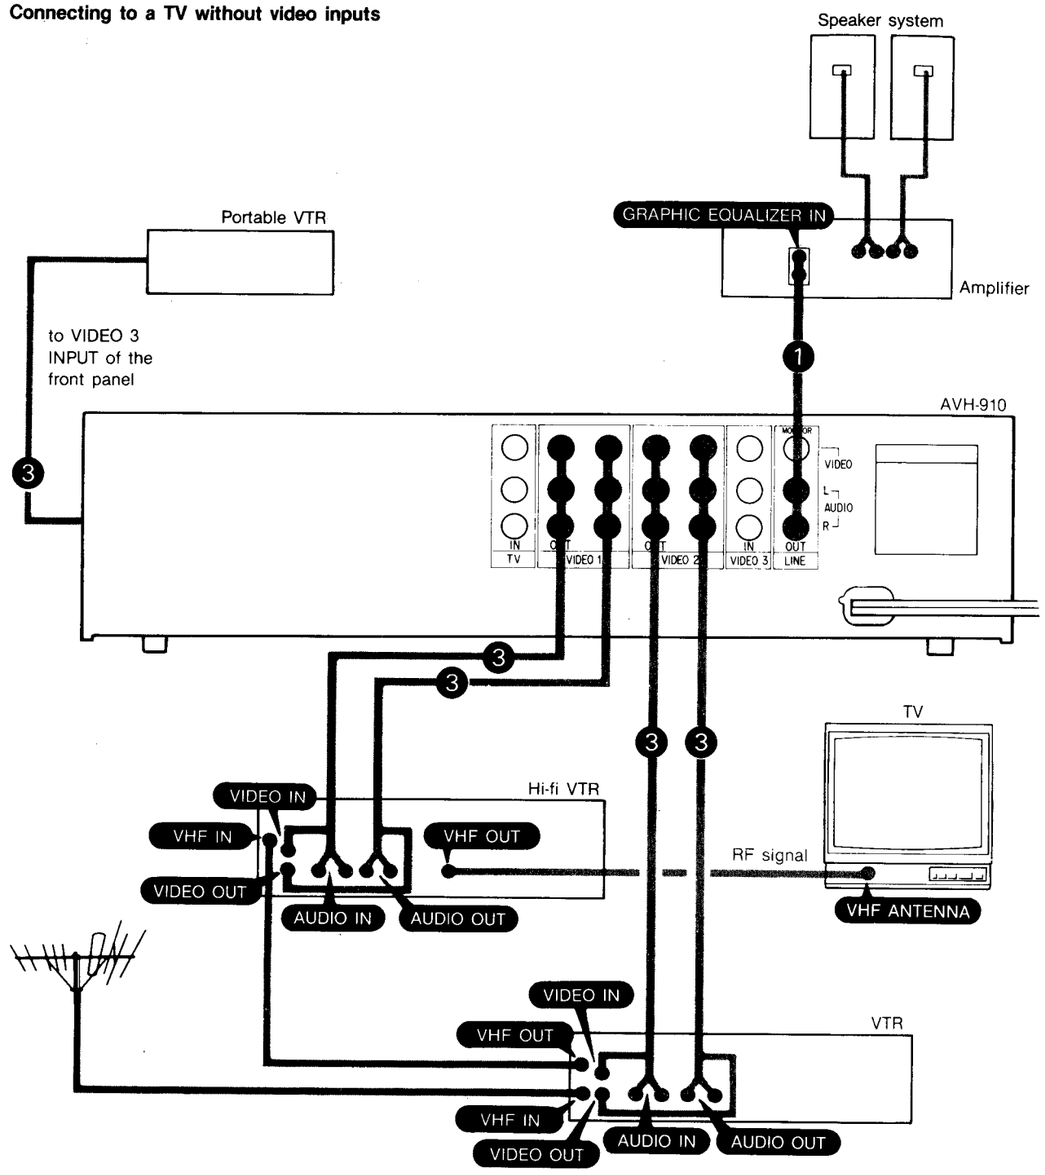

Note
To view a program source of a VTR other than the VTR connected to TV, set the input selector of the VTR connected to TV to LINE. For details, refer to the instruction manual of the VTR.

Connecting to a TV monitor

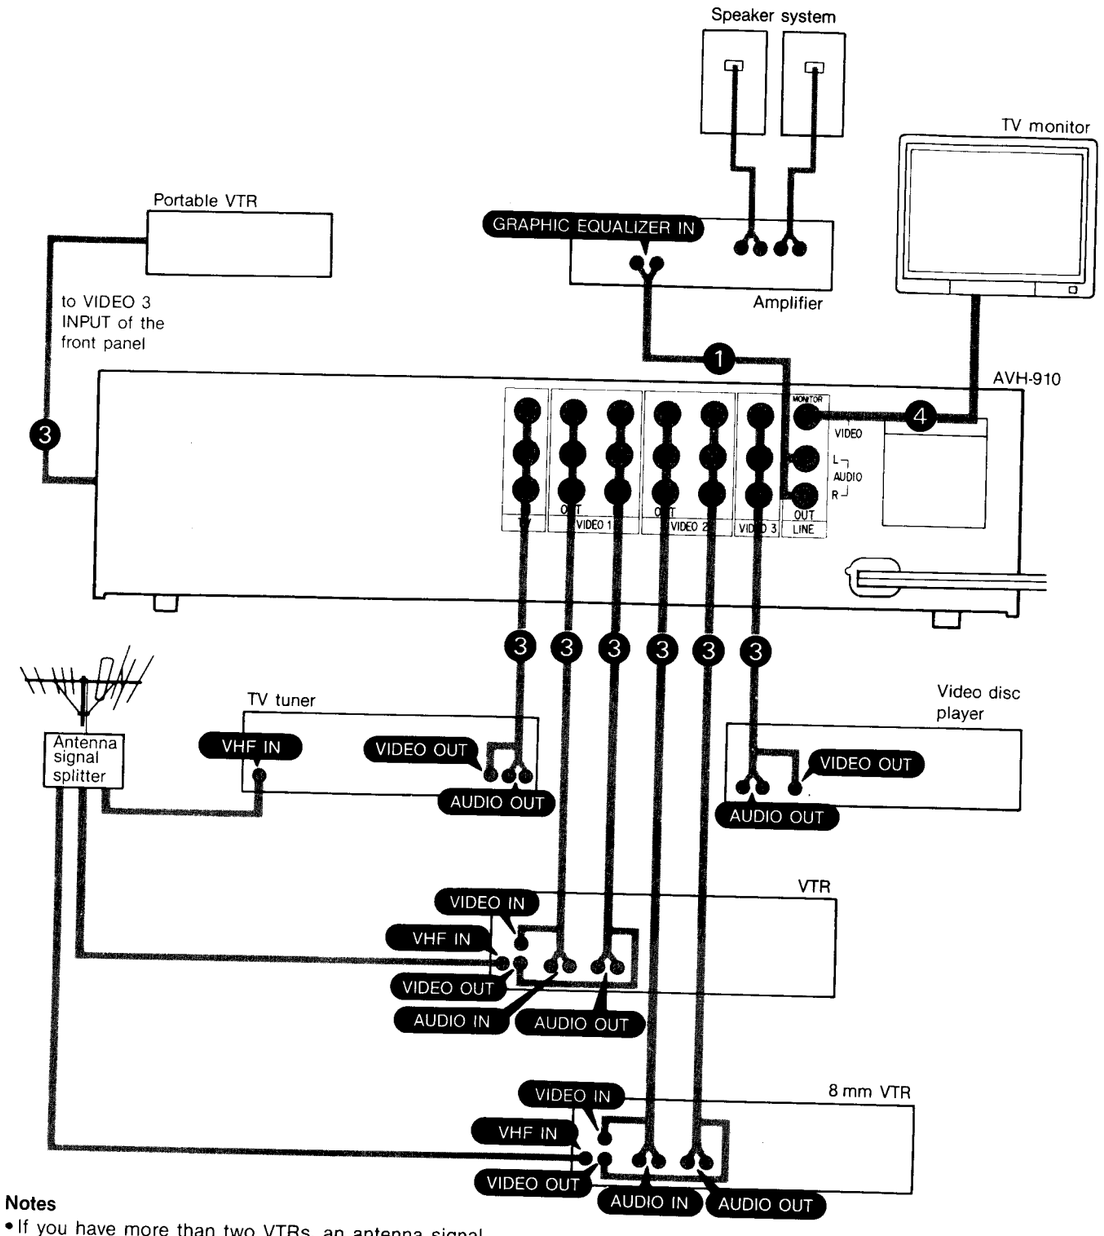

Notes

- If you have more than two VTRs, an antenna signal splitter is required.
- If your VTR is monaural, connect only L channel of the AVH-910. If both L and R channels are connected, the stereo separation of an audio program source heard from the speakers will be affected.

REMOTE CONTROL CONNECTION

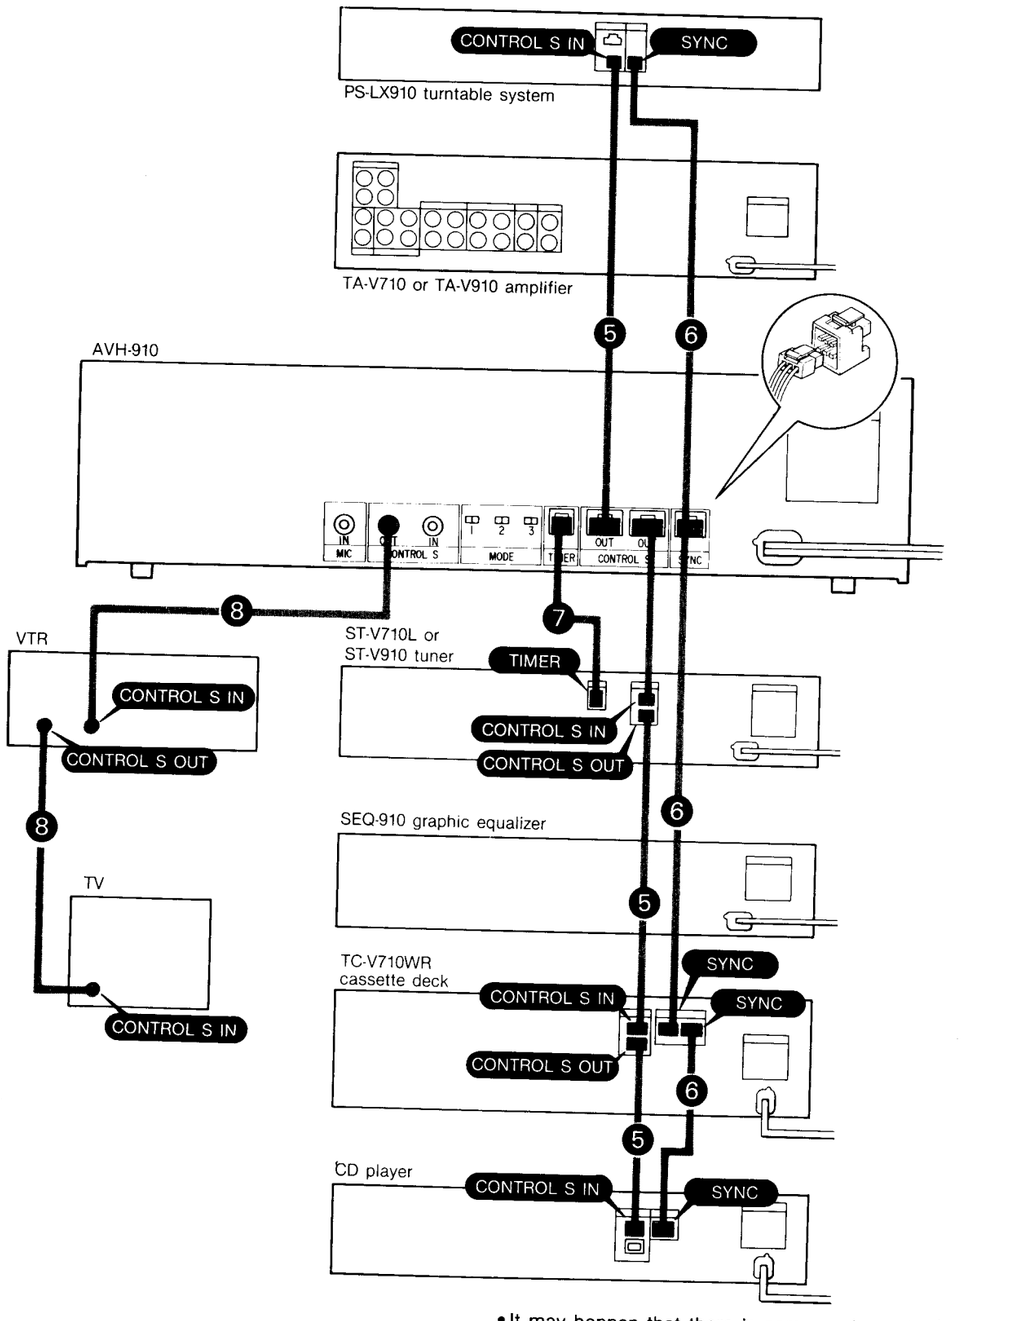

Notes:

- With this connection, only the remote sensor of the AVH-910 can receive a commander signal and that of other equipment connected to the AVH-910 cannot.
- It may happen that there is some equipment whose remote control operation is not possible with this connection. In this case, disconnect the remote control cord.

SECTION 1
OUTLINE

BLOCK DIAGRAM

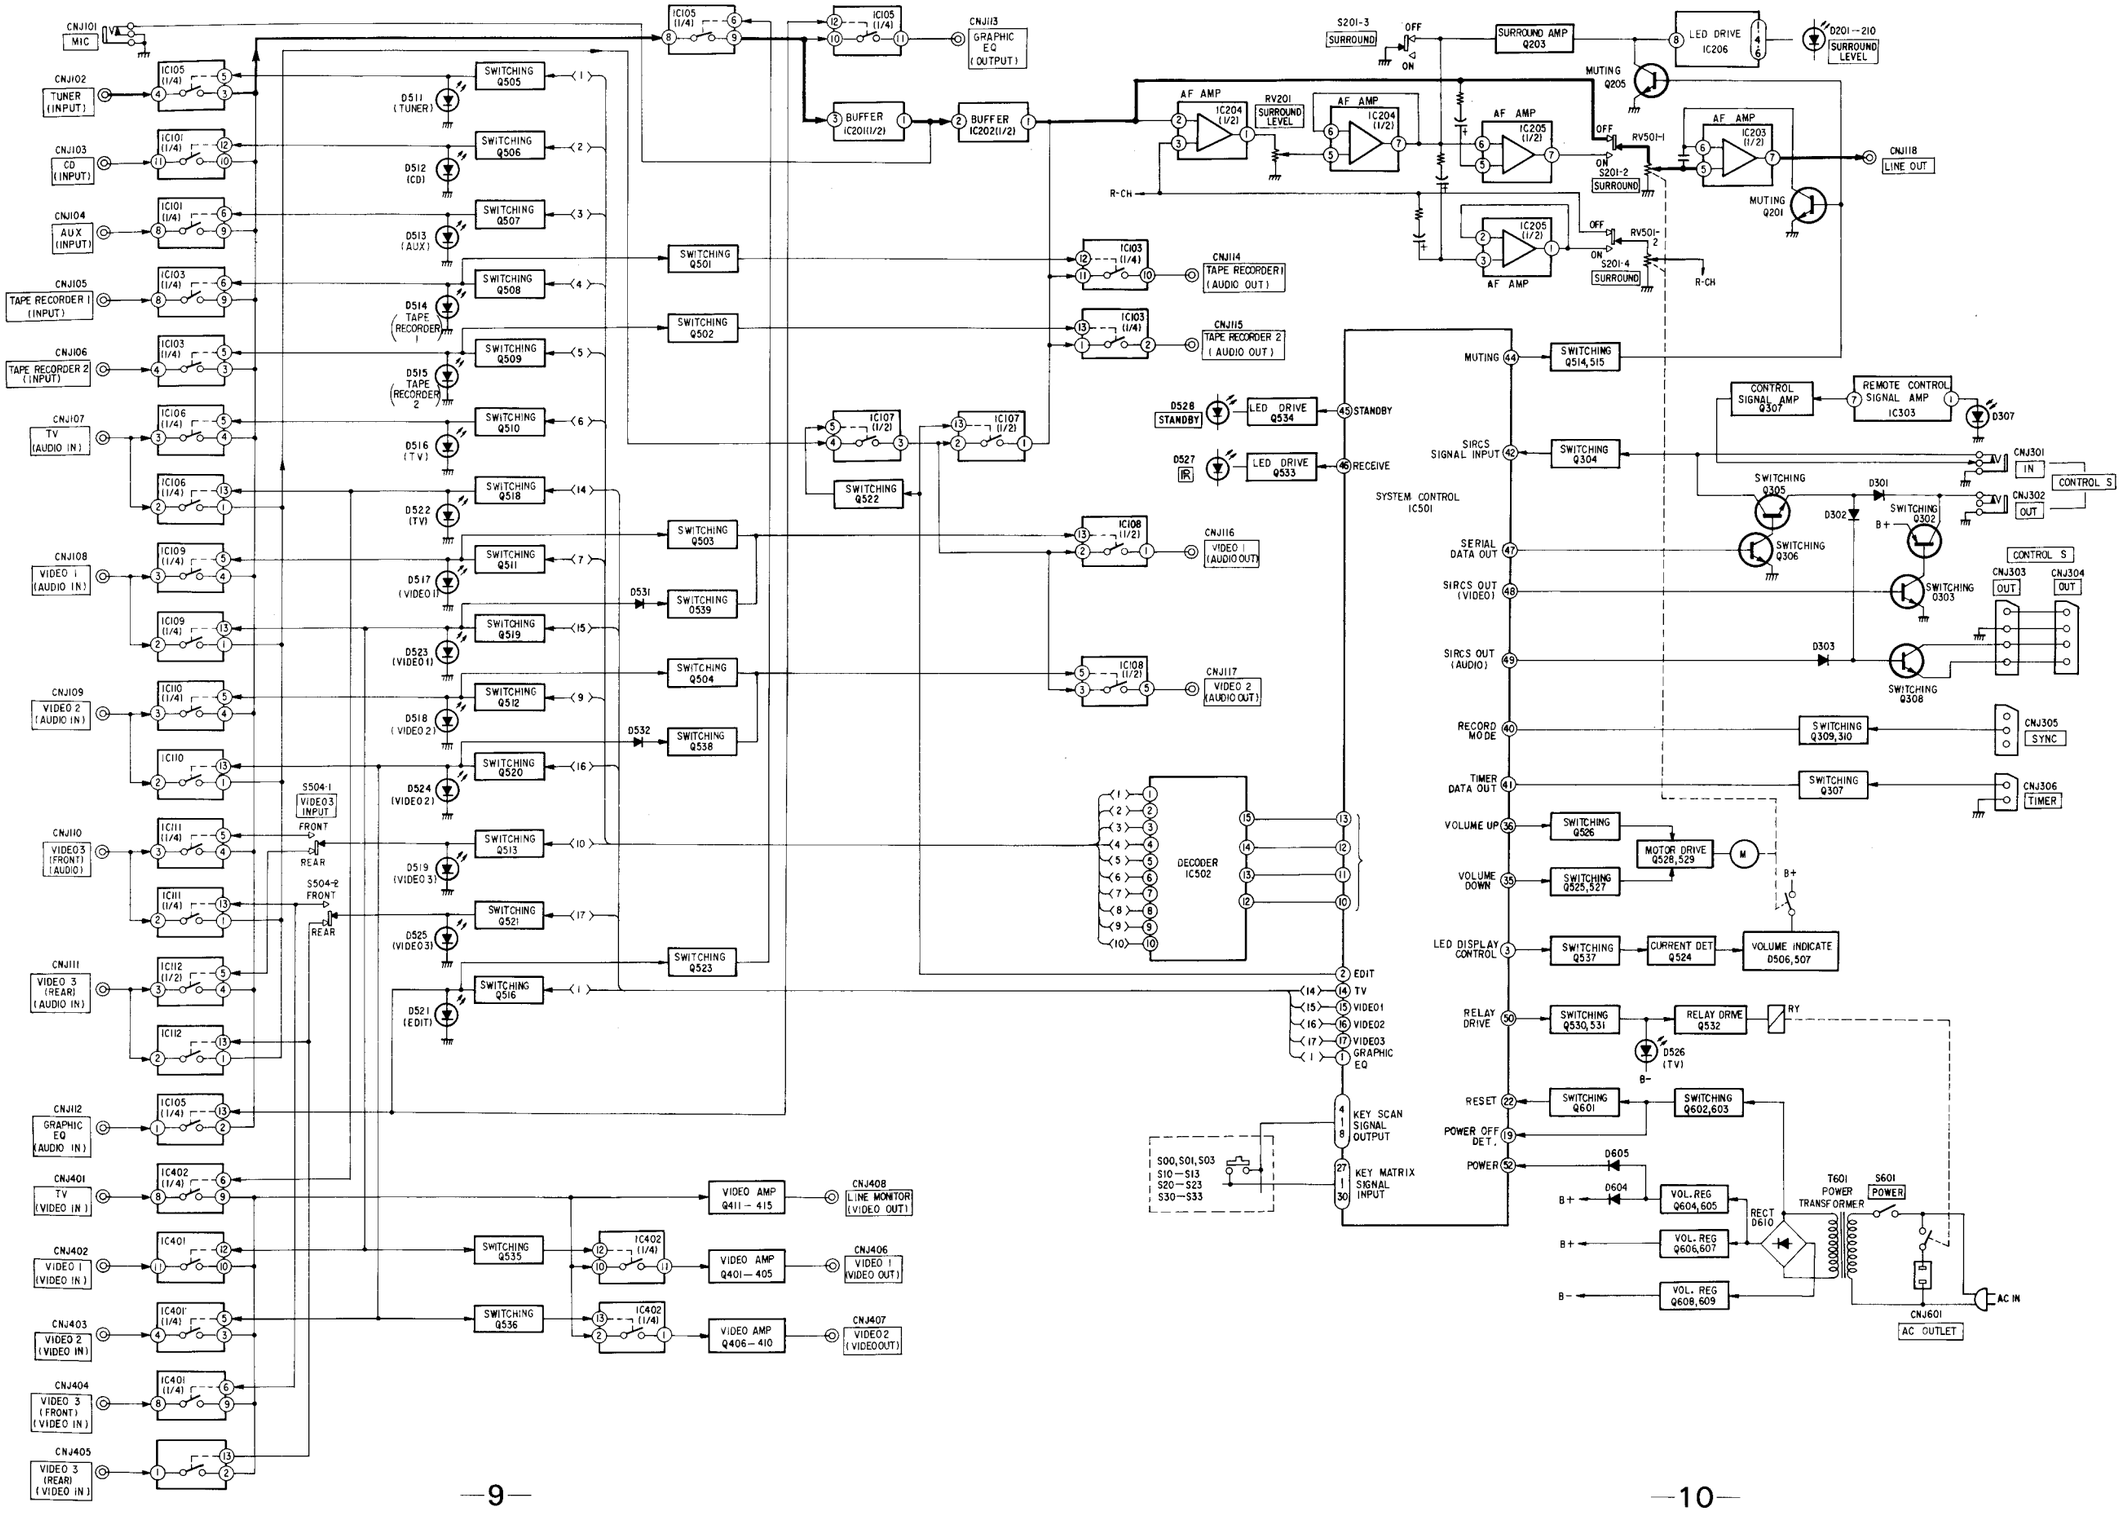

CASE, BOT

The main boa
by removing t

VIDEO BO

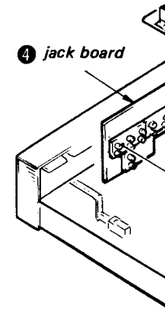

SECTION 2
DISASSEMBLY

CASE, BOTTOM PLATE REMOVAL

The main board can be checked by removing the bottom plate.

Note: Follow the disassembly procedure in the numerical order given.

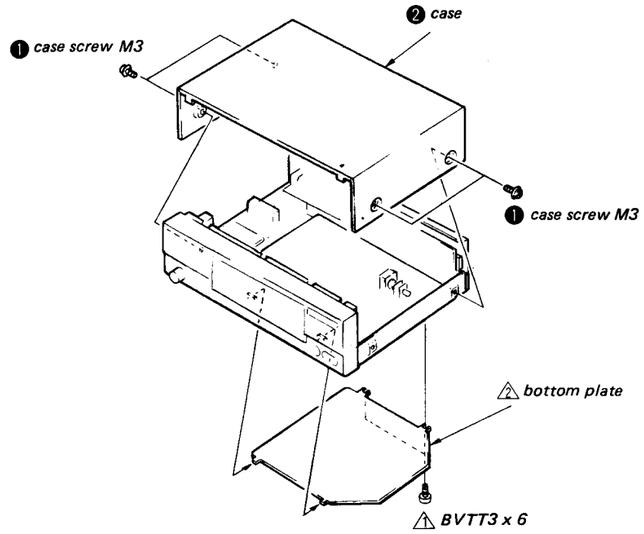

VIDEO BOARD, JACK BOARD REMOVAL

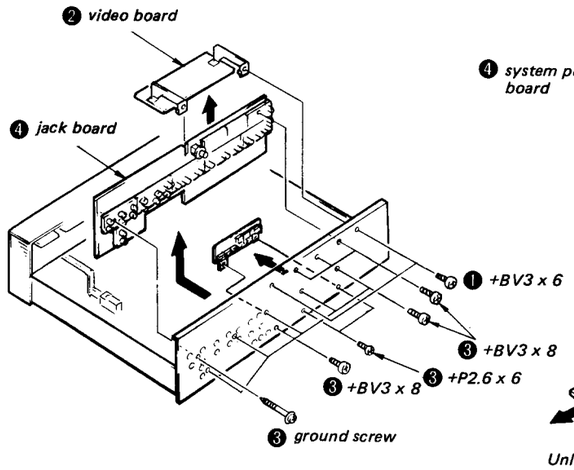

PANEL, EACH PC BOARD REMOVAL

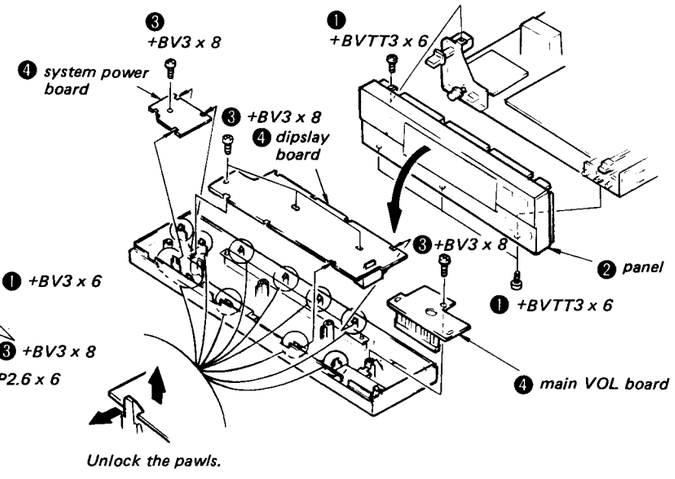

Unlock the pawls.

• Semiconductor Lead Layouts

M50740A-422SP

M5209P
M5218P

CX20106

LB1423N

TC4066BP



TC40H042P



S1VB20

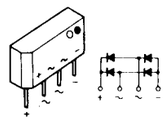

SV02



1SS202-1



10E2
HZ6C2L
HZ9C3



PH302B



GL-9EG2
GL-9HY2



SEL2210S-C
SEL2410E-C



SLP252B-50



2SC3622A-K

2SK246-BL

2SC2603F
DTA114ES
DTC114ES
DTC144ES

2SB834-O
2SC1826-Y



2SB734

2SB731
2SD809



2SA1175



SECTION 3
DIAGRAMS

3-1. MOUNTING DIAGRAM

- See page 12 for Semiconductor Lead Layouts.

• SEMICONDUCTOR LOCATION

Ref. No.	Location	Ref. No.	Location
D201	H-11	Q201	B-17
D202	H-11	Q202	B-17
D203	H-10	Q203	D-16
D204	H-11	Q204	C-15
D205	H-10	Q205	D-15
D206	H-12	Q301	C-23
D207	H-10	Q302	B-21
D208	H-12	Q303	B-21
D209	H-10	Q304	F-18
D210	H-12	Q305	B-22
D211	H-11	Q306	F-17
D301	B-21	Q307	B-22
D302	B-22	Q308	B-23
D303	F-19	Q309	B-24
D304	B-23	Q310	B-24
D307	H-3	Q401	E-8
D501	G-21	Q402	E-8
D502	G-21	Q403	F-7
D503	G-21	Q404	E-7
D504	G-21	Q405	E-7
D505	E-20	Q406	E-8
D506	I-1	Q407	E-8
D507	I-4	Q408	F-9
D508	D-17	Q409	E-9
D509	F-20	Q410	E-9
D510	F-20	Q411	F-11
D511	I-5	Q412	F-11
D512	I-6	Q413	F-11
D513	I-7	Q414	E-11
D514	I-9	Q415	E-11
D515	I-8	Q501	H-24
D516	I-12	Q502	H-23
D517	I-11	Q503	I-22
D518	I-10	Q504	I-22
D519	I-10	Q505	G-23
D520	I-7	Q506	G-23
D521	I-12	Q507	G-23
D522	I-12	Q508	H-23
D523	I-11	Q509	H-23
D524	I-10	Q510	H-23
D525	I-10	Q511	G-22
D526	H-15	Q512	I-23
D527	H-6	Q513	I-22
D528	H-16	Q514	G-18
D529	E-20	Q515	G-19
D530	E-20	Q516	I-22
D531	I-21	Q517	H-21
D532	I-21	Q518	H-21
D533	H-25	Q519	H-21
D534	G-25	Q520	H-21
D601	J-25	Q521	I-21
D602	D-24	Q522	H-21
D603	H-19	Q523	I-23
D604	F-21	Q524	D-18
D605	F-20	Q525	F-18
D606	E-21	Q526	F-18
D608	D-23	Q527	F-17
D609	E-23	Q528	E-17
D610	B-25	Q529	E-18
		Q530	G-24
IC101	A-1		
IC102	A-3	Q531	G-24
IC103	C-2	Q532	H-24
IC104	B-5	Q533	G-18
IC105	D-5	Q534	G-18
		Q535	F-9
IC106	A-7		
IC107	A-7	Q536	F-9
IC108	A-8	Q537	F-20
IC109	A-9	Q538	I-22
IC110	A-10	Q539	I-22
		Q540	I-22
IC111	A-11		
IC112	A-11	Q601	I-25
IC201	C-20	Q602	I-25
IC202	C-19	Q603	H-25
IC203	C-18	Q604	F-22
		Q605	E-21
IC204	E-14		
IC205	E-13	Q606	D-23
IC206	I-10	Q607	D-23
IC303	H-3	Q608	E-23
IC401	F-10	Q609	E-23
IC402	F-7		
IC501	G-20		
IC502	G-22		

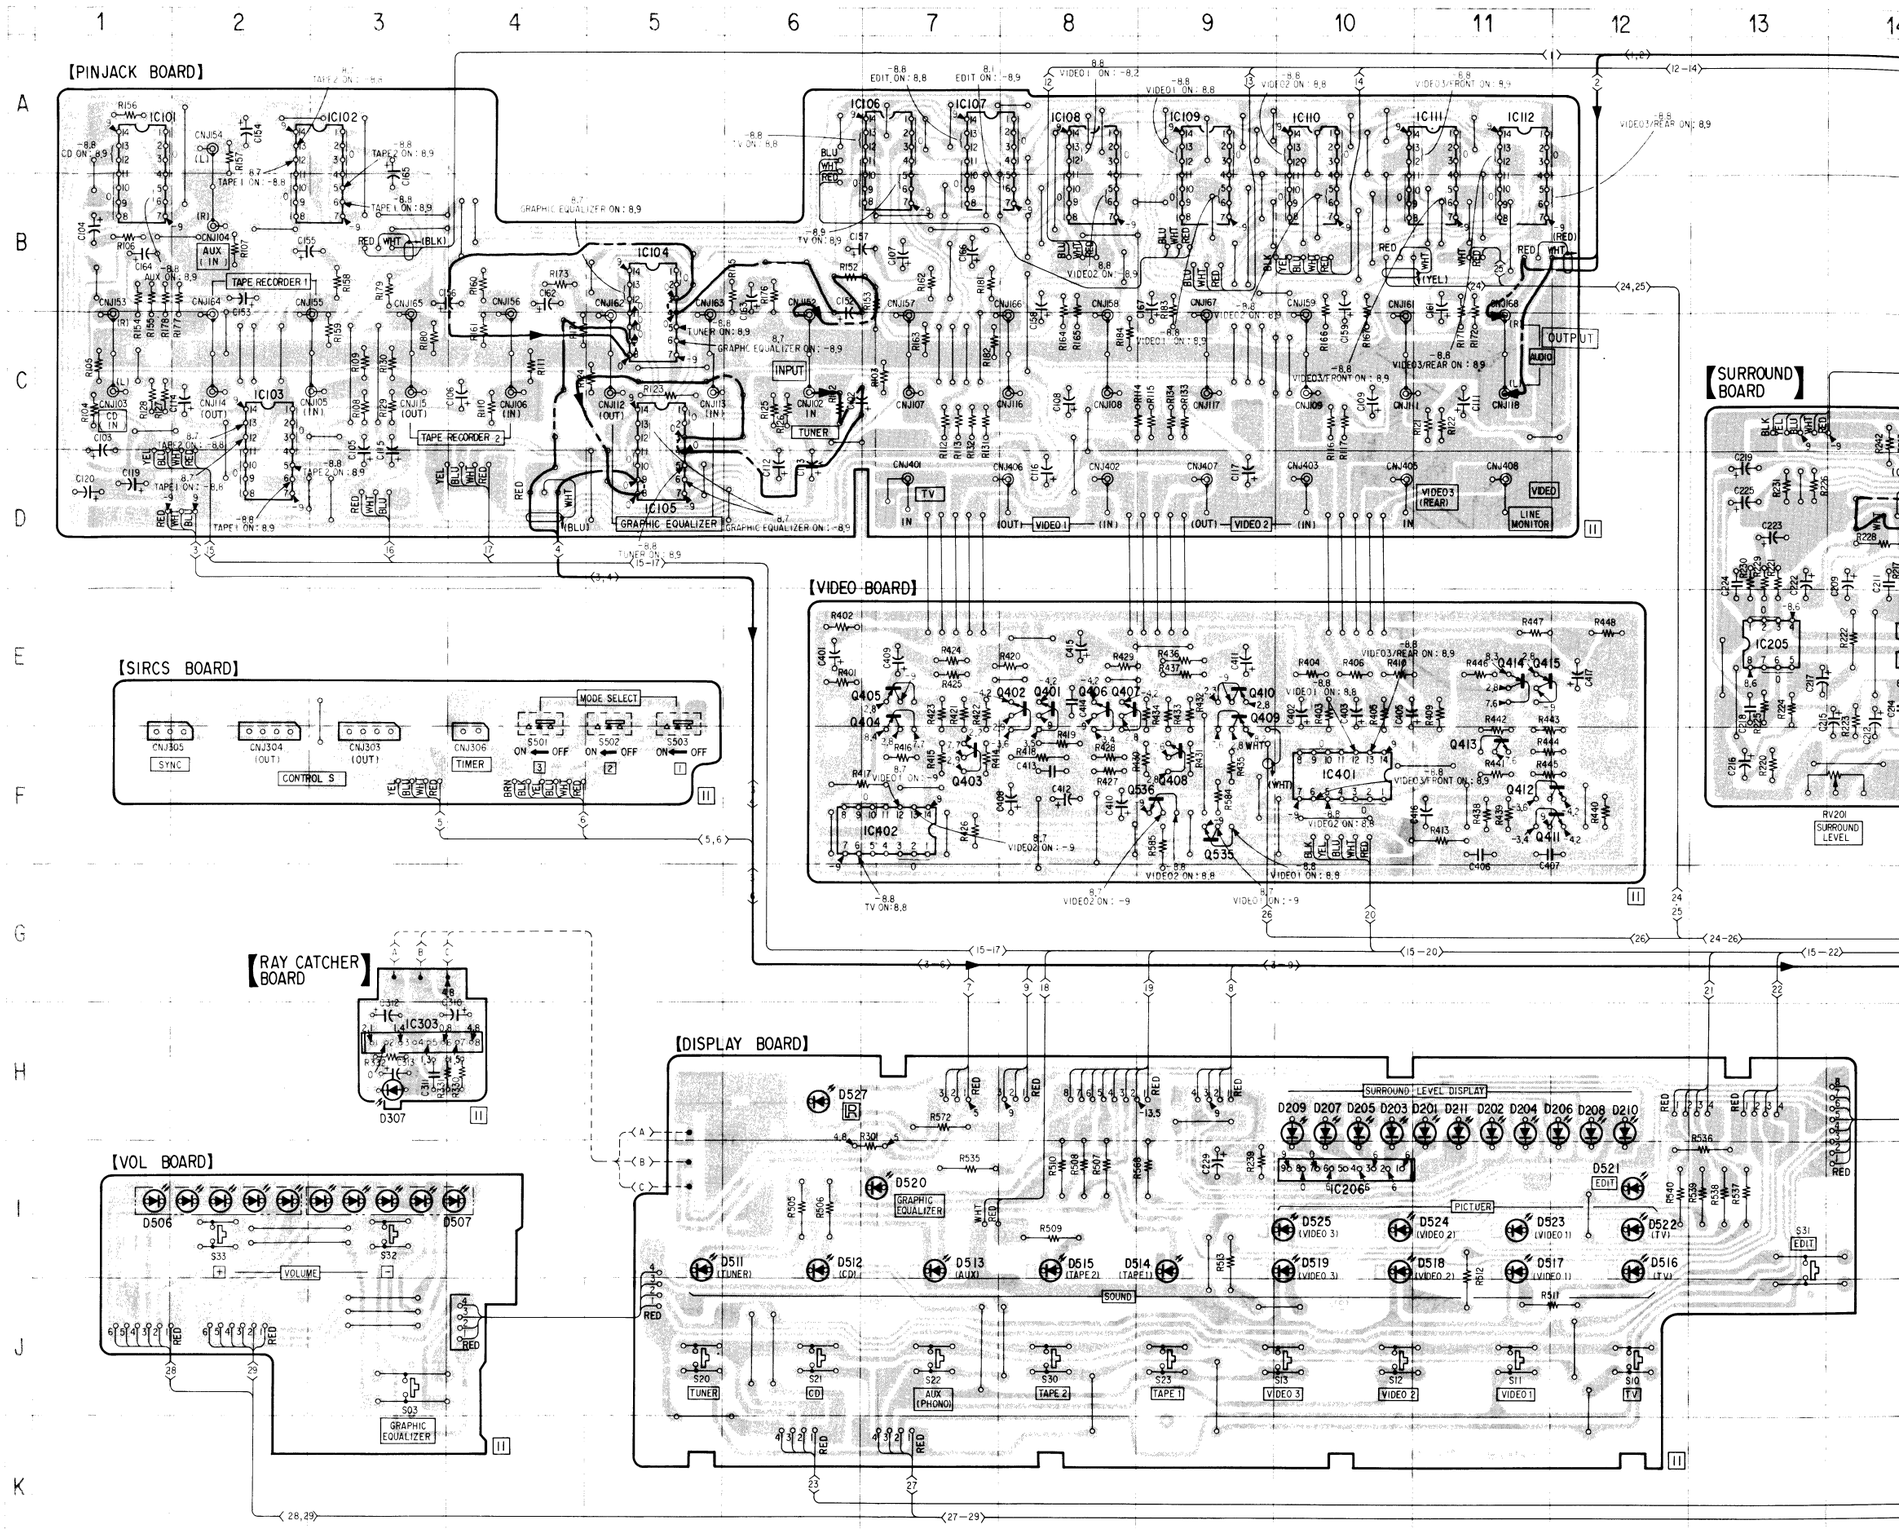

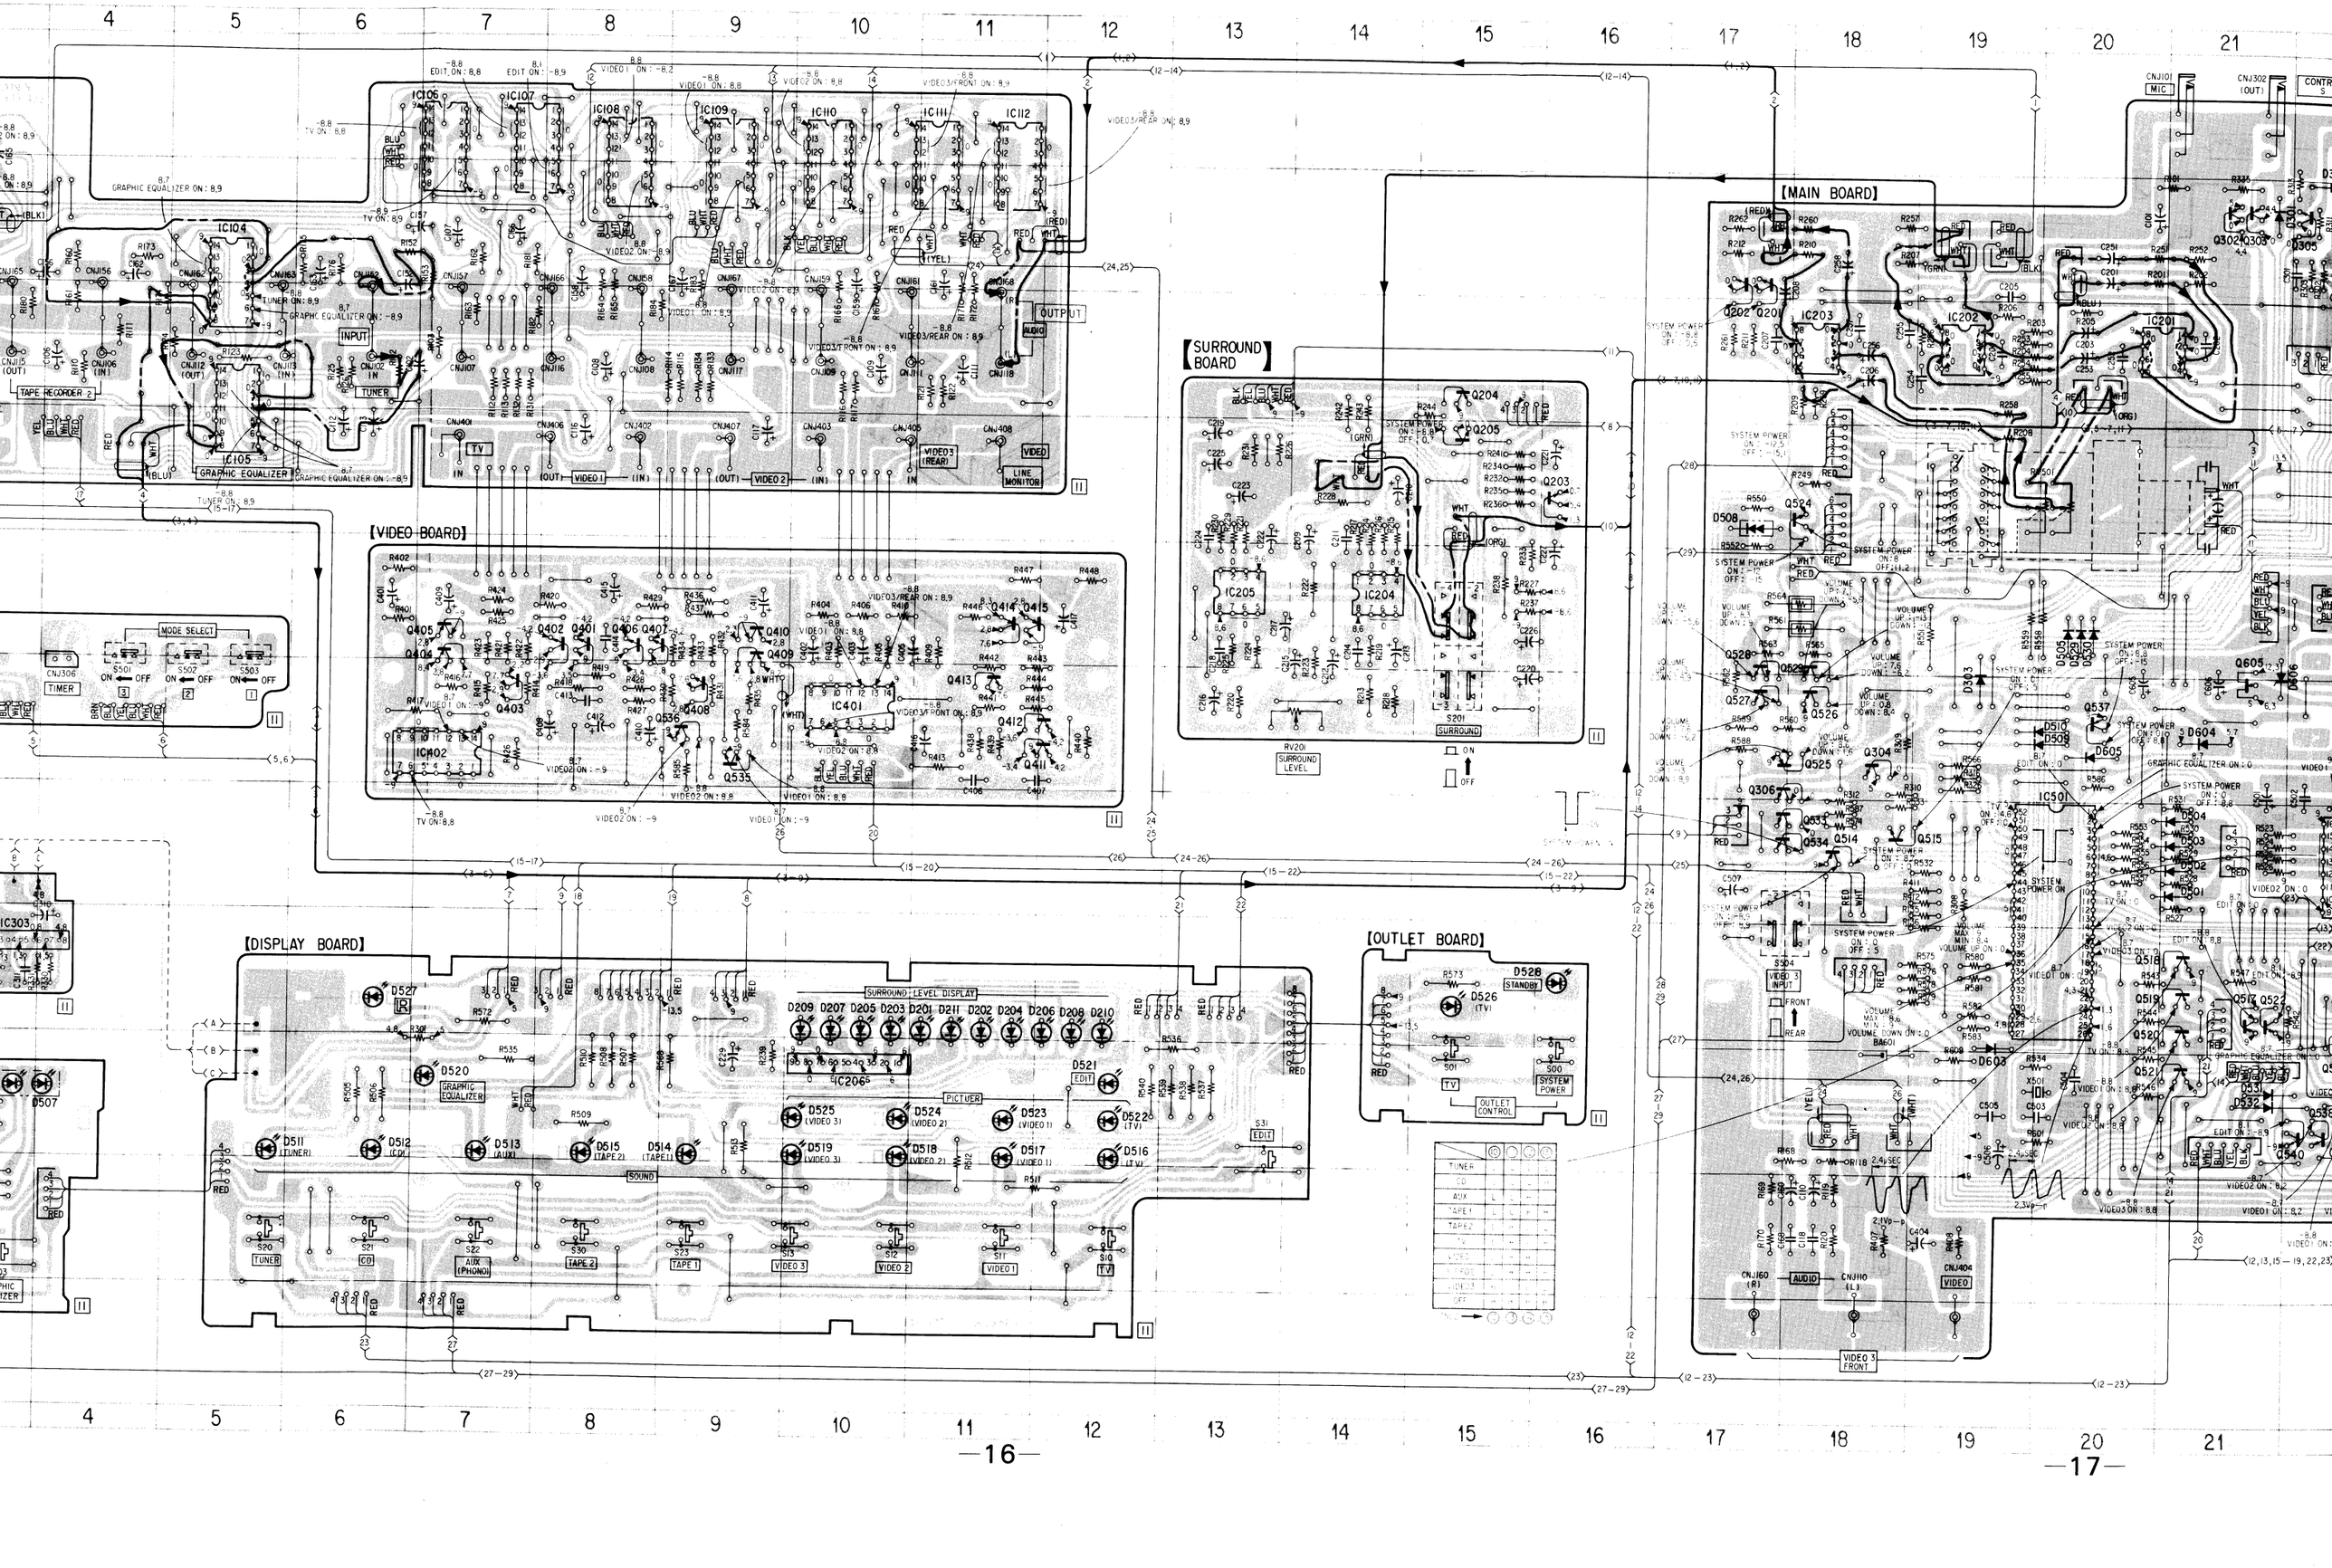
【VIDEO BOARD】
【SURROUND BOARD】
【MAIN BOARD】
【DISPLAY BOARD】
【OUTLET BOARD】
IC106
IC107
IC108
IC109
IC110
IC111
IC112
IC104
IC105
IC205
IC204
IC203
IC202
IC201
IC402
IC401
IC501
IC2065
GRAPHIC EQUALIZER ON : 8,9
GRAPHIC EQUALIZER ON : -8,9
TUNER ON : 8,9
TV ON : 8,8
VIDEO1 ON : -8,2
VIDEO2 ON : 8,8
VIDEO3/FRONT ON : 8,9
VIDEO3/REAR ON : 8,9
EDIT ON : 8,8
EDIT ON : -8,9
INPUT
TUNER
TV
VIDEO 1
VIDEO 2
VIDEO3 (REAR)
LINE MONITOR
OUTPUT
AUDIO
VIDEO
TAPE RECORDER 2
MODE SELECT
TIMER
S501
S502
S503
ON ⟷ OFF
RV201
SURROUND LEVEL
S201
SURROUND
SURROUND LEVEL DISPLAY
PICTURE
SOUND
D527
D520
GRAPHIC EQUALIZER
D511 (TUNER)
D512 (CD)
D513 (AUX)
D515 (TAPE 2)
D514 (TAPE 1)
D525 (VIDEO 3)
D524 (VIDEO 2)
D523 (VIDEO 1)
D522 (TV)
D519 (VIDEO 3)
D518 (VIDEO 2)
D517 (VIDEO 1)
D516 (TV)
D521 EDIT
S20 TUNER
S21 CD
S22 AUX (PHONO)
S30 TAPE 2
S23 TAPE 1
S13 VIDEO 3
S12 VIDEO 2
S11 VIDEO 1
S10 TV
S31 EDIT
D528 STANDBY
D526 (TV)
S01 TV
S00 SYSTEM POWER
OUTLET CONTROL
TUNER
CD
AUX
TAPE 1
TAPE 2
VIDEO 1
VIDEO 2
VIDEO 3
TV
OFF
CNJ306
CNJ101 MIC
CNJ302 (OUT)
CNJ303
CNJ304
CNJ305
CNJ307
CNJ308
CNJ309
CNJ310
CNJ311
CNJ312
CNJ313
CNJ314
CNJ315
CNJ316
CNJ317
CNJ318
CNJ401
CNJ402
CNJ403
CNJ404
CNJ405
CNJ406
CNJ407
CNJ408
CNJ160 (R)
CNJ110 (L)
AUDIO
VIDEO
VIDEO 3 FRONT
VIDEO 3 INPUT
FRONT
REAR
SYSTEM POWER ON : 8,8 OFF : 0,5
SYSTEM POWER ON : 8,8 OFF : 1,5
SYSTEM POWER ON : 8,8 OFF : 8,8
SYSTEM POWER ON : 8,2 OFF : 5
SYSTEM POWER ON : 0 OFF : 8,8
SYSTEM POWER ON
VOLUME UP : 8,3 DOWN : 3
VOLUME UP : 7,3 DOWN : 5,6
VOLUME UP : 7,6 DOWN : 8,2
VOLUME UP : 0,8 DOWN : 8,4
VOLUME UP : 0,2 DOWN : 8,9
VOLUME UP : 1,6 DOWN : 8,9
VOLUME MAX : 8,4 MIN : 8,4
VOLUME UP ON : 0
VOLUME DOWN ON : 0
GRAPHIC EQUALIZER ON : 0
EDIT ON : 8,8
EDIT ON : -8,9
TV ON : 8,8
VIDEO1 ON : 8,2
VIDEO2 ON : 8,2
VIDEO3 ON : 8,8
VIDEO1 ON : -9
VIDEO2 ON : -9
VIDEO2 ON : 8,8
VIDEO3/FRONT ON : 8,9
VIDEO3/REAR ON : 8,9
VIDEO1 ON : 8,8
VIDEO3/FRONT ON : 8,9
2.4V p-p
2.3V p-p
(1)
(2)
(3,4)
(5,6)
(7,8,10)
(9)
(11)
(12-14)
(15-17)
(15-20)
(15-22)
(24,25)
(24-26)
(26)
(27-29)
(12-23)
(12,13,15-19,22,23)

Note:

- Color code or sleeving over the end of the jacket.

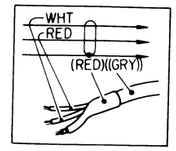

- ○— : parts extracted from the component side.
- ●— : parts extracted from the conductor side.

[MAIN BOARD]

[OUTLET BOARD]

AEP,UK MODEL

E MODEL

3-2. SCHEMATIC DIAGRAM

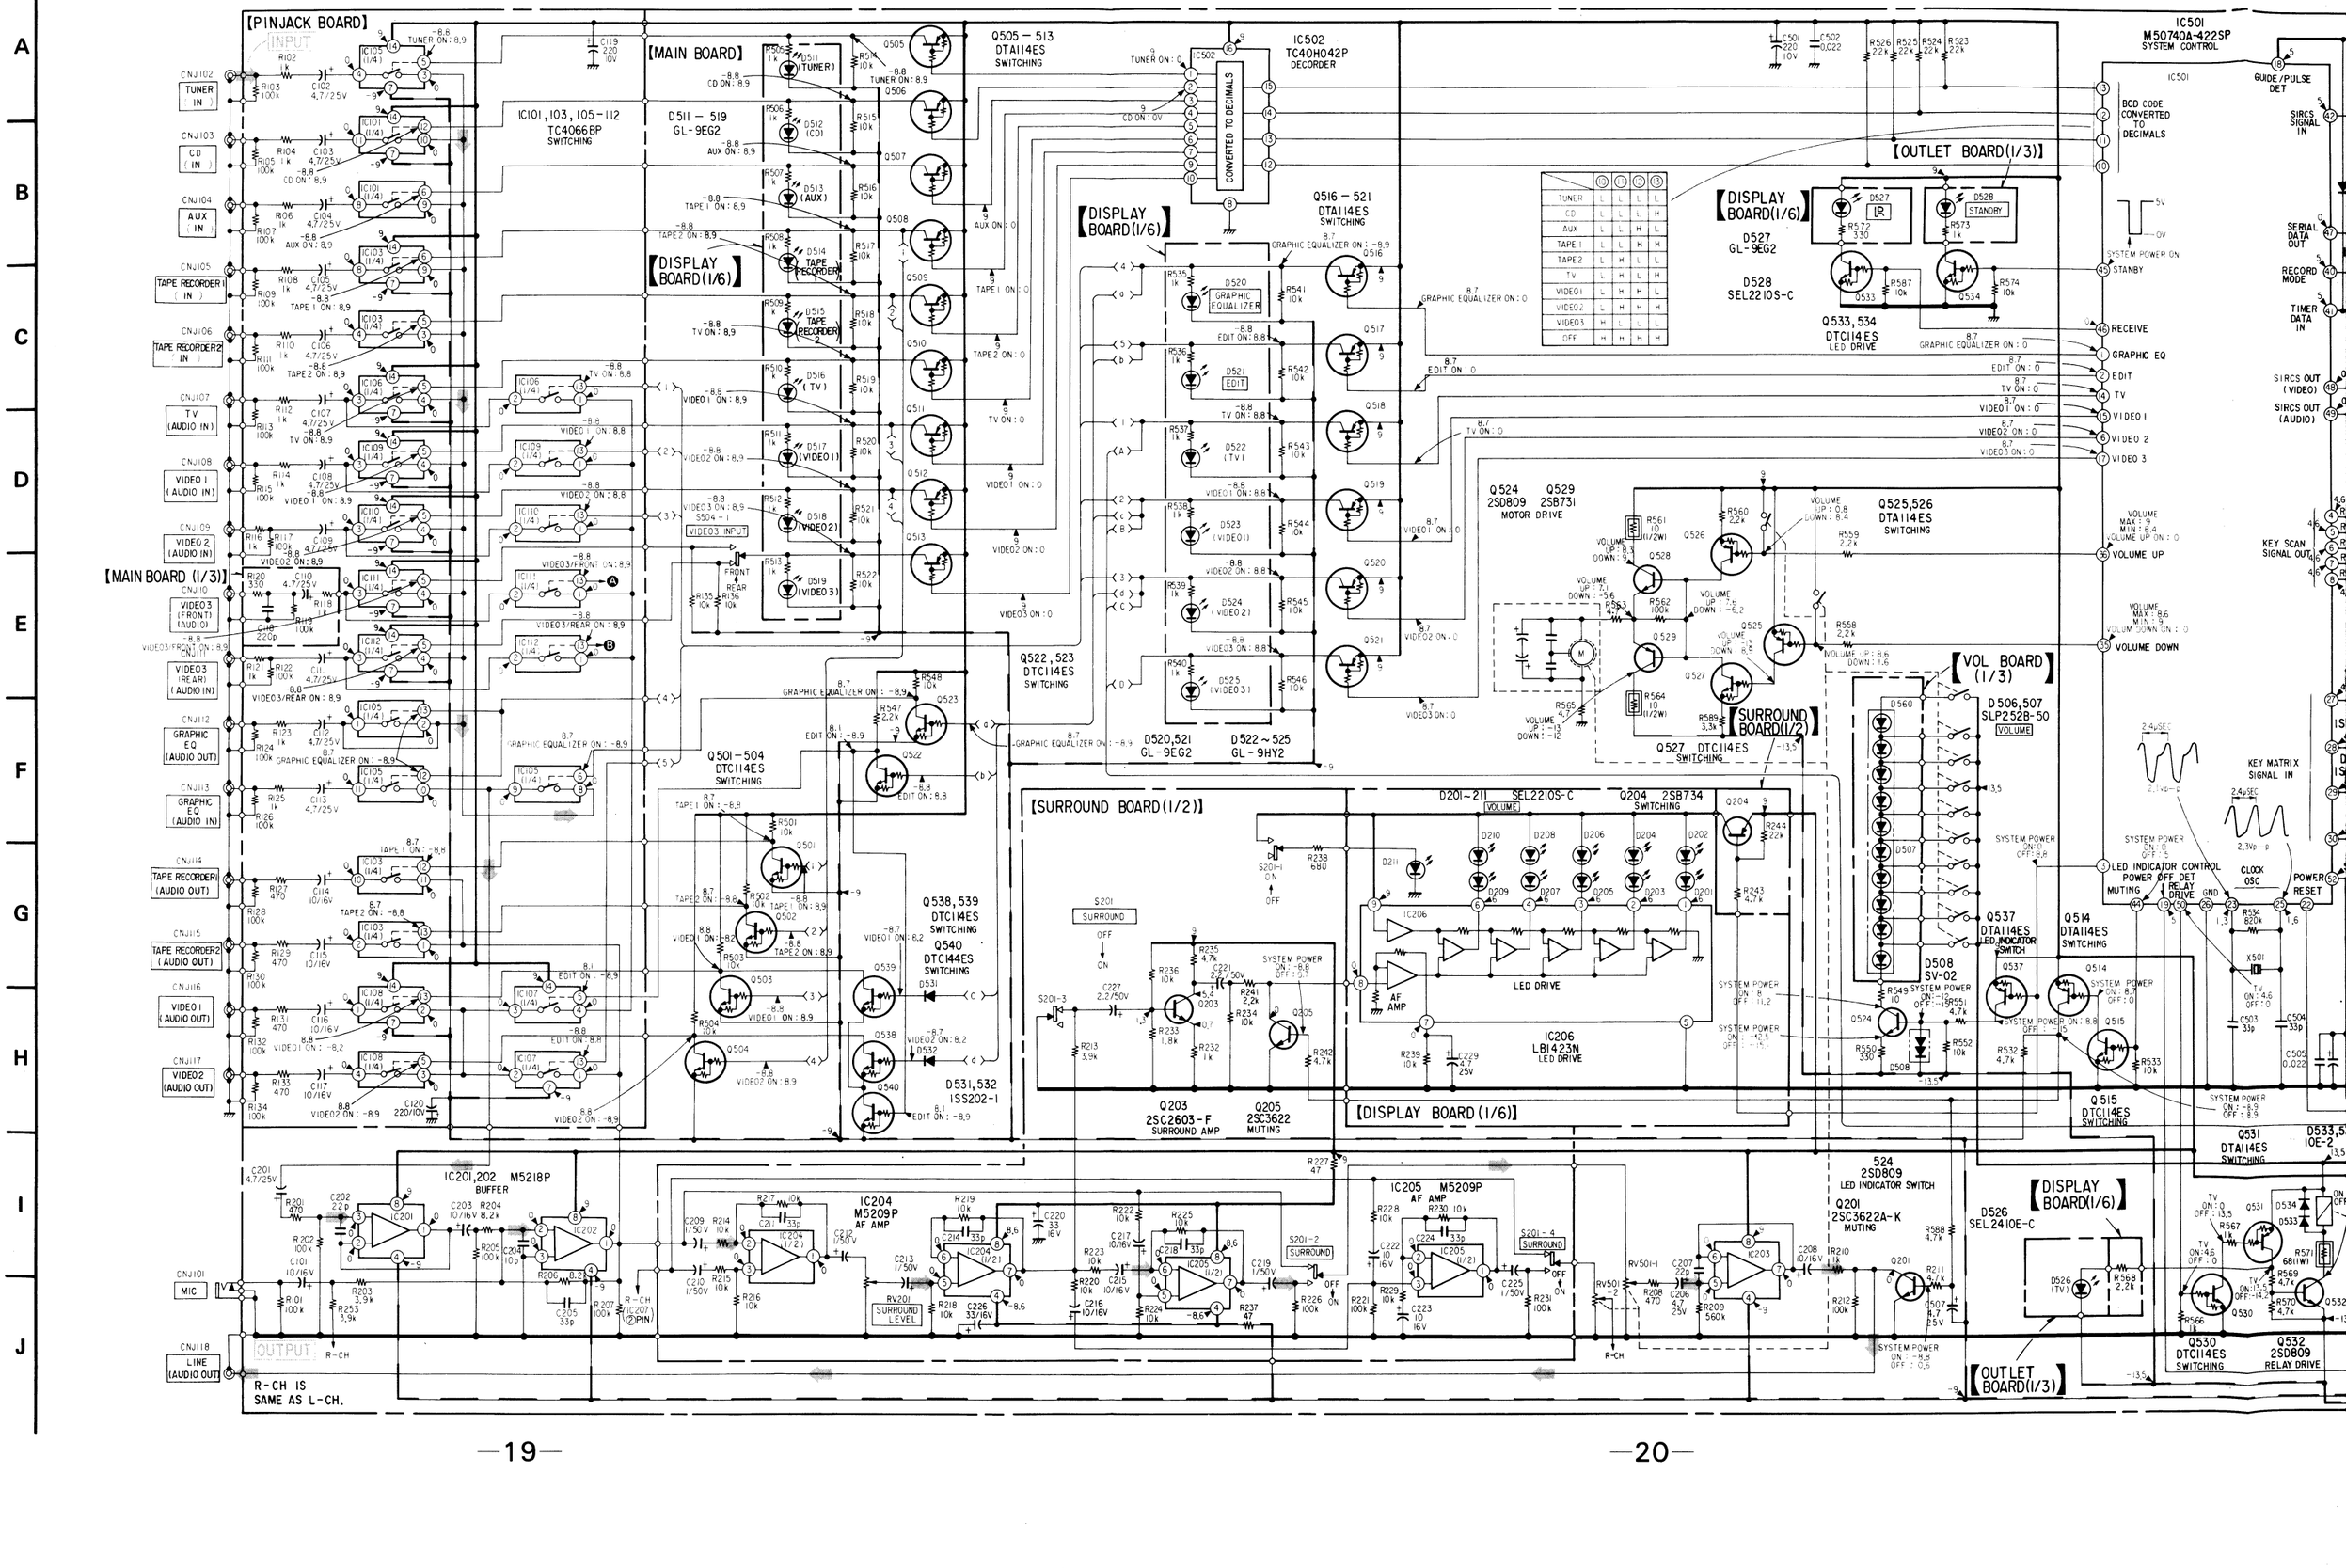

15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30

A B C D E F G H I J

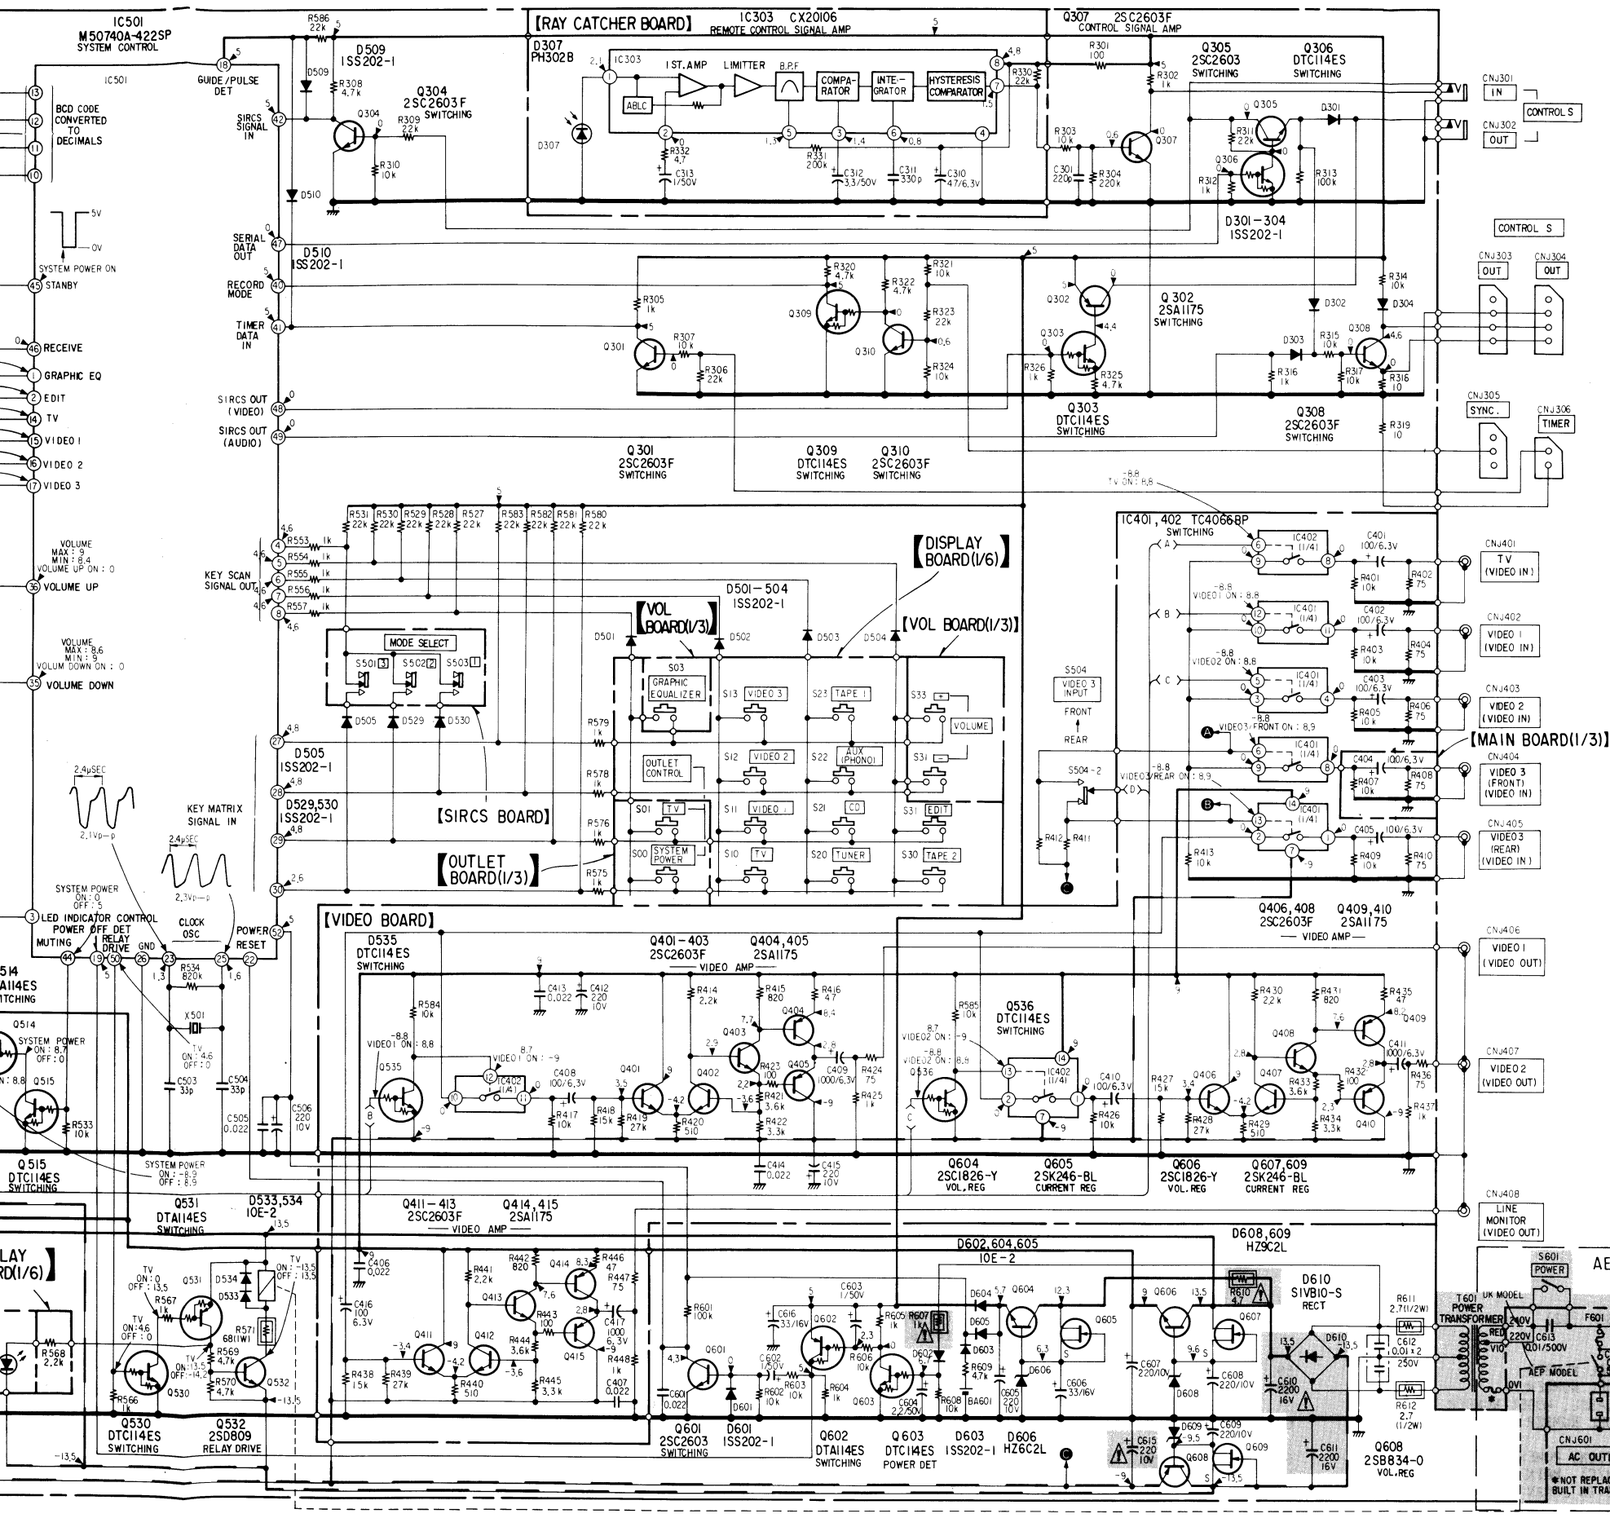

Note:

- All capacitors are in μF unless otherwise noted. pF: μμF 50WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and ¼ W or less unless otherwise specified.
- ⇨ : signal path.
- Components for right channel have same values as for left channel.
  Reference numbers are adding 50 to that for left channel.
- ⚠ : nonflammable resistor.
- ▬▬ : B+ bus.
- ▬ ▬ : B− bus.
- ▭ : adjustment for repair.
- Readings are taken under no-signal conditions with a VOM (50 kΩ/V).
- Switch

Ref. No.	Switch	Position
S00	SYSTEM POWER	OFF
S01	TV	OFF
S03	GRAPHIC EQUALIZER	OFF
S10	TV	OFF
S11	VIDEO 1	OFF
S12	VIDEO 2	OFF
S13	VIDEO 3	OFF
S20	TUNER	OFF
S21	CD	OFF
S22	AUX/PHONO	OFF
S23	TAPE 1	OFF
S30	TAPE 2	OFF
S31	EDIT	OFF
S32	VOLUME/−	OFF
S33	VOLUME/+	OFF
S201	SURROUND	OFF
S501	MODE SELECT/1	OFF
S502	MODE SELECT/2	OFF
S503	MODE SELECT/3	OFF
S504	VIDEO 3 INPUT	OFF
S601	POWER	OFF

Note: The components identified by shading and mark ⚠ are critical for safety. Replace only with part number specified.

SECTION 4
EXPLODED VIEWS AND PARTS LIST

NOTE:
- The mechanical parts with no reference number in the exploded views are not supplied.
- Items marked " ★ " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The construction parts of an assembled part are indicated with a collation number in the remark column.

The components identified by shading and mark ⚠ are critical for safety. Replace only with part number specified.

(1)

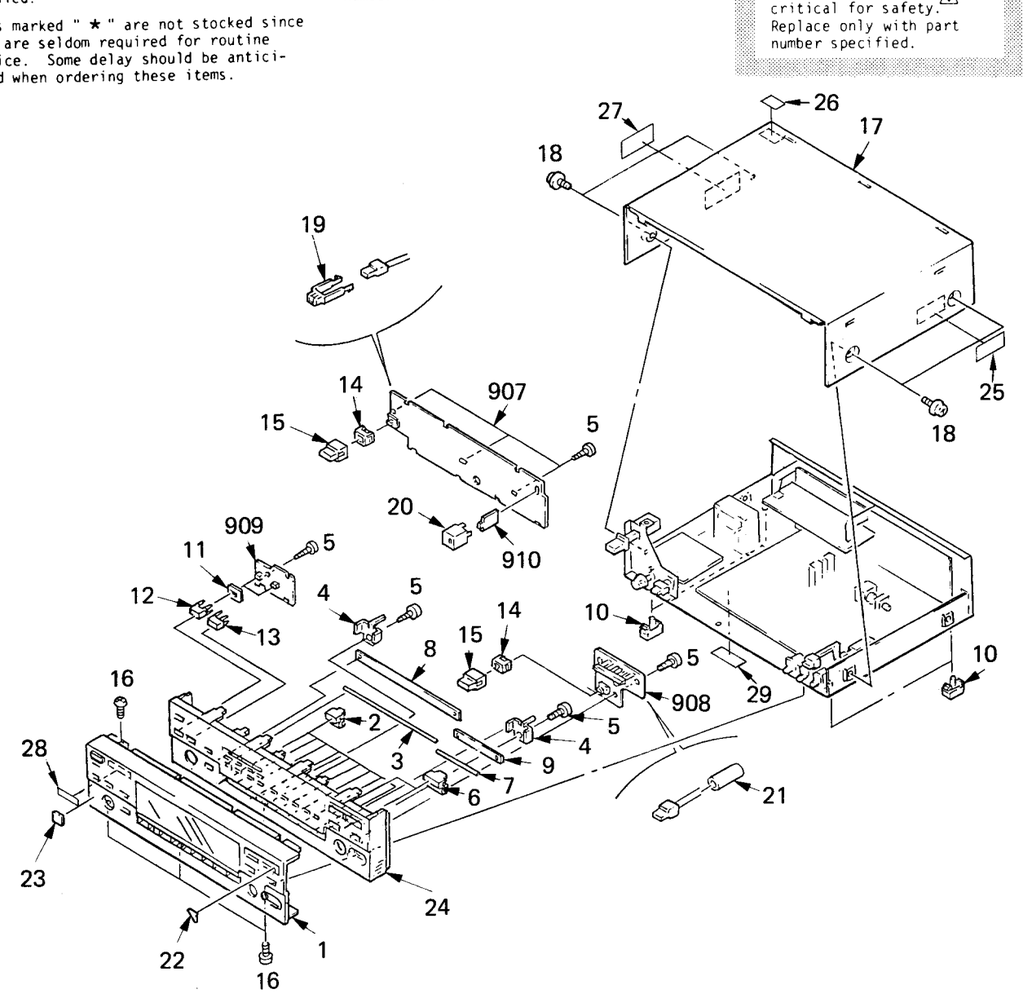

No.	Part No.	Description	Remarks
1	X-4912-112-2	PANEL ASSY	
2	4-912-142-01	KNOB (F), T	
3	*4-904-458-41	SHAFT	
4	*4-912-141-01	BRACKET, SHAFT	
5	7-685-646-71	SCREW +BVTP 3X8 TYPE2 N-S	
6	4-912-143-01	KNOB (V), T	
7	*4-904-458-31	SHAFT	
8	*4-912-146-01	CUSHION (A)	
9	*4-912-144-01	CUSHION (B)	
10	X-4907-603-1	FOOT ASSY	
11	*4-912-105-01	CUSHION	
12	3-689-516-41	KEY, POWER	
13	3-689-516-31	KEY, POWER	
14	4-881-725-00	RING (TACT), FLEXIBLE	
15	3-318-909-11	KNOB, PUSH	
16	7-685-871-01	SCREW +BVTT 3X6 (S)	
17	4-912-151-01	CASE	
18	4-886-821-01	SCREW, M3 CASE	
19	4-912-145-01	HOLDER, LED	
20	*4-888-110-00	CASE, SHIELD	
21	*4-886-543-32	TUBE, CUSHION	
22	4-908-335-01	STICKER, AV	
23	3-703-710-41	STICKER, SONY SYMBOL (12)	
24	X-4912-113-2	PANEL ASSY	
25	4-912-119-01	(E).....LABEL, MODEL NUMBER	
	4-912-120-01	(UK)....LABEL, MODEL NUMBER	
	4-912-121-01	(West Germany)...LABEL, MODEL NUMBER	
	*4-912-121-11	(AEP)...LABEL, MODEL NUMBER	
26	3-550-458-00	(E)....LABEL, CAUTION, POWER SELECTOR	
27	3-703-845-01	(UK)...LABEL (N)(U/C), MAIN CAUTION	
28	3-701-690-00	(UK)...LABEL, MADE IN JAPAN	
29	3-703-081-21	(UK)...LABEL (SIDE), SUB CAUTION	

(2)

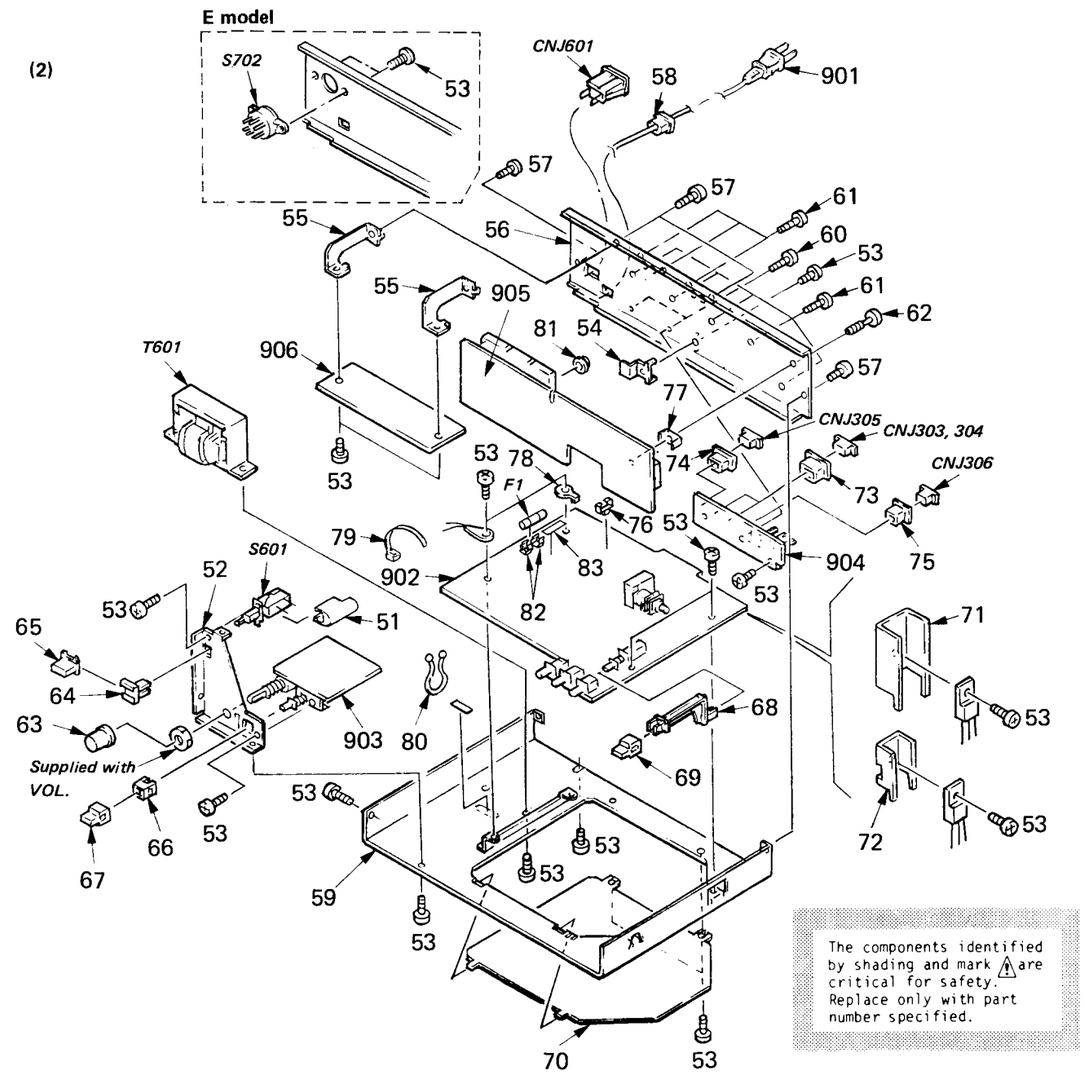

The components identified by shading and mark ⚠ are critical for safety. Replace only with part number specified.

No.	Part No.	Description	Remarks
51	3-575-524-00	COVER, POWER SWITCH	
52	*4-912-148-01	BRACKET (A), PC BOARD	
53	7-685-871-01	SCREW +BVTT 3X6 (S)	
54	*4-912-138-01	BRACKET (S), PC BOARD	
55	*4-912-139-01	BRACKET (B), PC BOARD	
56	*4-912-149-31	(AEP)...PLATE, JACK	
	*4-912-149-51	(UK)....PLATE, JACK	
	*4-912-149-61	(E).....PLATE, JACK	
57	3-703-108-21	SCREW +BV 3X6, S TIGHT	
58	3-703-244-00	(AEP,UK)...BUSHING (2104), CORD	
	3-703-571-00	(E).....BUSHING (4516), CORD	
59	*X-4912-105-1	CHASSIS ASSY	
60	7-685-133-14	SCREW +P 2.6X6 TYPE1	
61	7-685-646-71	SCREW +BVTP 3X8 TYPE2 N-S	
62	4-904-486-01	SCREW (F.U), GROUND	
63	4-912-167-01	KNOB (20), R	
64	4-875-466-00	JOINT (F2), KNOB	
65	4-907-611-01	KNOB, POWER	
66	4-864-307-00	RING	
67	3-318-909-11	KNOB, PUSH	
68	3-318-824-01	ROD, KNOB	
69	3-304-926-11	KNOB (A), PUSH	
70	*4-912-117-01	PLATE, BOTTOM	
71	*4-880-403-11	HEAT SINK	
72	*4-875-327-01	HEAT SINK	
73	4-882-034-00	SPACER, TERMINAL, 2 GANG	
74	*3-322-819-01	HOLDER, CONNECTOR	
75	*3-323-401-01	HOLDER (2 PIN), CONNECTOR	
76	*3-655-214-00	CLIP, CABLE	
77	*4-904-485-01	PLATE (F.U), GROUND	
78	4-870-539-00	PLATE, GROUND	
79	3-701-748-00	CLAMP	
80	*3-701-417-00	PURSE LOCK (11 DIA.)	
81	*2-353-833-01	SPACER	
82	1-533-183-11	(AEP,UK)...HOLDER, FUSE	
83	3-701-948-18	(AEP,UK)....LABEL, FUSE	
S601	1-553-318-00	SWITCH, PUSH (AC POWER)(1 KEY)	
T601	⚠1-448-493-11	(AEP,UK)...TRANSFORMER, POWER	
T601	⚠1-448-494-11	(E).....TRANSFORMER, POWER	

NOTE:
- Items mark they are s service. pated wher
- If there a set such a typical ci capacitors circuits m

Ref.No.	Par
901	⚠1-5
	⚠1-5
	⚠1-5
902	*A-4
	*A-4
903	*1-6
904	*1-6
905	*1-6
906	*1-6
907	*1-6
908	*1-6
909	*1-6
910	*1-6
911	*1-5
912	*1-5
913	*1-5
914	*1-5
915	*1-5
916	*1-5
917	*1-5
918	*1-5
919	*1-5
920	*1-5
921	*1-5
922	*1-5
923	*1-5
924	*1-5
925	*1-5
926	*1-5
927	*1-5
928	*1-5
929	*1-5
930	*1-5
931	*1-5
932	*1-5
933	*1-5
934	*1-5
935	*1-5
936	*1-5
937	*1-5
BA601	1-5
C101	1-1
C102	1-1
C103	1-1

SECTION 5
ELECTRICAL PARTS LIST

NOTE:
- Items marked " ★ " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- If there are two or more same circuitsin a set such as a stereophonic machine, only typical circuit parts may be indicated and capacitors and resistors in other same circuits may be omitted.

CAPACITORS:
MF:μF, PF:μμF.

RESISTORS
- All resistors are in ohms.
- F : nonflammable

COILS
- MMH : mH, UH : μH .

SEMICONDUCTORS
In each case, U : μ, for example:
UA...: μA..., UPA...: μPA..., UPC...: μPC, UPD...: μPD...

The components identified by shading and mark ⚠1 are critical for safety. Replace only with part number specified.

ELECTRICAL PARTS

Ref.No.	Part No.	Descriptrion
901	⚠1-534-817-XX	(AEP)...CORD, POWER, EULO PLUG
	⚠1-551-188-XX	(E).....CORD, POWER
	⚠1-556-562-00	(UK)....CORD, POWER
902	*A-4410-199-A	(AEP,UK)...MOUNTED PCB, MAIN
	*A-4410-200-A	(E).....MOUNTED PCB, MAIN
903	*1-617-428-11	PC BOARD, SURROUND
904	*1-617-425-11	PC BOARD, CIRCUS
905	*1-617-426-11	PC BOARD, JACK
906	*1-617-427-11	PC BOARD, VIDEO
907	*1-617-422-11	PC BOARD, DISPLAY
908	*1-617-423-11	PC BOARD, MAIN VOLUME
909	*1-617-424-11	PC BOARD, SYSTEM POWER
910	*1-614-454-11	PC BOARD, RAY CATCHER
911	*1-535-116-00	(AEP,UK)...TERMINAL
912	*1-535-139-00	BASE POST 22MM (10MM PITCH) 2P
913	*1-535-140-00	BASE POST 22MM (10MM PITCH) 3P
914	*1-535-444-00	(AEP,UK)....TERMINAL
915	*1-562-249-00	SOCKET, CONNECTOR 4P
916	*1-562-250-00	SOCKET, CONNECTOR 5P
917	*1-562-250-00	SOCKET, CONNECTOR 5P
918	*1-562-250-00	SOCKET, CONNECTOR 5P
919	*1-562-327-00	SOCKET, CONNECTOR 3P
920	*1-564-336-00	PIN, CONNECTOR 2P
921	*1-564-337-00	PIN, CONNECTOR 3P
922	*1-564-338-00	PIN, CONNECTOR 4P
923	*1-564-340-00	PIN, CONNECTOR 6P
924	*1-564-342-11	PIN, CONNECTOR 8P
925	*1-564-497-11	PIN, CONNECTOR 4P
926	*1-564-497-11	PIN, CONNECTOR 4P
927	*1-564-501-11	PIN, CONNECTOR 8P
928	*1-564-506-11	PLUG, CONNECTOR 3P
929	*1-564-506-11	PLUG, CONNECTOR 3P
930	*1-564-506-11	PLUG, CONNECTOR 3P
931	*1-564-506-11	PLUG, CONNECTOR 3P
932	*1-564-507-11	PLUG, CONNECTOR 4P
933	*1-564-507-21	PLUG, CONNECTOR 4P
934	*1-564-508-11	PLUG, CONNECTOR 5P
935	*1-564-508-11	PLUG, CONNECTOR 5P
936	*1-564-508-11	PLUG, CONNECTOR 5P
937	*1-564-509-11	PLUG, CONNECTOR 6P
BA601	1-528-120-00	BATTERY, LITHIUM (CR-2025)

C101	1-123-617-00	ELECT	10MF	20%	16V
C102	1-123-616-00	ELECT	4.7MF	20%	25V
C103	1-123-616-00	ELECT	4.7MF	20%	25V

ELECTRICAL PARTS

Ref.No.	Part No.	Descriptrion			
C104	1-123-616-00	ELECT	4.7MF	20%	25V
C105	1-123-616-00	ELECT	4.7MF	20%	25V
C106	1-123-616-00	ELECT	4.7MF	20%	25V
C107	1-123-616-00	ELECT	4.7MF	20%	25V
C108	1-123-616-00	ELECT	4.7MF	20%	25V
C109	1-123-616-00	ELECT	4.7MF	20%	25V
C110	1-123-616-00	ELECT	4.7MF	20%	25V
C111	1-123-616-00	ELECT	4.7MF	20%	25V
C112	1-123-616-00	ELECT	4.7MF	20%	25V
C113	1-123-616-00	ELECT	4.7MF	20%	25V
C114	1-123-617-00	ELECT	10MF	20%	16V
C115	1-123-617-00	ELECT	10MF	20%	16V
C116	1-123-617-00	ELECT	10MF	20%	16V
C117	1-123-617-00	ELECT	10MF	20%	16V
C118	1-162-286-31	CERAMIC	220PF	10%	50V
C119	1-123-308-00	ELECT	220MF	20%	10V
C120	1-123-308-00	ELECT	220MF	20%	10V
C152	1-123-616-00	ELECT	4.7MF	20%	25V
C153	1-123-616-00	ELECT	4.7MF	20%	25V
C154	1-123-616-00	ELECT	4.7MF	20%	25V
C155	1-123-616-00	ELECT	4.7MF	20%	25V
C156	1-123-616-00	ELECT	4.7MF	20%	25V
C157	1-123-616-00	ELECT	4.7MF	20%	25V
C158	1-123-616-00	ELECT	4.7MF	20%	25V
C159	1-123-616-00	ELECT	4.7MF	20%	25V
C160	1-123-616-00	ELECT	4.7MF	20%	25V
C161	1-123-616-00	ELECT	4.7MF	20%	25V
C162	1-123-616-00	ELECT	4.7MF	20%	25V
C163	1-123-616-00	ELECT	4.7MF	20%	25V
C164	1-123-617-00	ELECT	10MF	20%	16V
C165	1-123-617-00	ELECT	10MF	20%	16V
C166	1-123-617-00	ELECT	10MF	20%	16V
C167	1-123-617-00	ELECT	10MF	20%	16V
C168	1-162-286-31	CERAMIC	220PF	10%	50V
C201	1-123-616-00	ELECT	4.7MF	20%	25V
C202	1-102-959-00	CERAMIC	22PF	5%	50V
C203	1-123-617-00	ELECT	10MF	20%	16V
C204	1-102-508-00	CERAMIC	10PF	0.5PF	50V
C205	1-102-963-00	CERAMIC	33PF	5%	50V
C206	1-123-616-00	ELECT	4.7MF	20%	25V
C207	1-102-959-00	CERAMIC	22PF	5%	50V
C208	1-123-617-00	ELECT	10MF	20%	16V
C209	1-123-611-00	ELECT	1MF	20%	50V
C210	1-123-611-00	ELECT	1MF	20%	50V
C211	1-102-963-00	CERAMIC	33PF	5%	50V

ELECTRICAL PARTS

Ref.No.	Part No.	Descriptrion			
C212	1-123-611-00	ELECT	1MF	20%	50V
C213	1-123-611-00	ELECT	1MF	20%	50V
C214	1-102-963-00	CERAMIC	33PF	5%	50V
C215	1-123-617-00	ELECT	10MF	20%	16V
C216	1-123-617-00	ELECT	10MF	20%	16V
C217	1-123-617-00	ELECT	10MF	20%	16V
C218	1-102-963-00	CERAMIC	33PF	5%	50V
C219	1-123-611-00	ELECT	1MF	20%	50V
C220	1-123-820-00	ELECT	33MF	20%	16V
C221	1-123-612-00	ELECT	2.2MF	20%	50V
C222	1-123-617-00	ELECT	10MF	20%	16V
C223	1-123-617-00	ELECT	10MF	20%	16V
C224	1-102-963-00	CERAMIC	33PF	5%	50V
C225	1-123-611-00	ELECT	1MF	20%	50V
C226	1-123-820-00	ELECT	33MF	20%	16V
C227	1-123-612-00	ELECT	2.2MF	20%	50V
C229	1-123-616-00	ELECT	4.7MF	20%	25V
C251	1-123-616-00	ELECT	4.7MF	20%	25V
C252	1-102-959-00	CERAMIC	22PF	5%	50V
C253	1-123-617-00	ELECT	10MF	20%	16V
C254	1-102-508-00	CERAMIC	10PF	0.5PF	50V
C255	1-102-963-00	CERAMIC	33PF	5%	50V
C256	1-123-616-00	ELECT	4.7MF	20%	25V
C257	1-102-959-00	CERAMIC	22PF	5%	50V
C258	1-123-617-00	ELECT	10MF	20%	16V
C301	1-162-286-31	CERAMIC	220PF	10%	50V
C310	1-123-647-00	ELECT	47MF	20%	6.3V
C311	1-162-288-31	CERAMIC	330PF	10%	50V
C312	1-123-613-00	ELECT	3.3MF	20%	50V
C313	1-123-611-00	ELECT	1MF	20%	50V
C401	1-124-468-11	ELECT	100MF	20%	6.3V
C402	1-124-468-11	ELECT	100MF	20%	6.3V
C403	1-124-468-11	ELECT	100MF	20%	6.3V
C404	1-124-468-11	ELECT	100MF	20%	6.3V
C405	1-124-468-11	ELECT	100MF	20%	6.3V
C406	1-101-005-00	CERAMIC	0.022MF		50V
C407	1-101-005-00	CERAMIC	0.022MF		50V
C408	1-124-468-11	ELECT	100MF	20%	6.3V
C409	1-124-471-00	ELECT	1000MF	20%	6.3V
C410	1-124-468-11	ELECT	100MF	20%	6.3V
C411	1-124-471-00	ELECT	1000MF	20%	6.3V
C412	1-123-308-00	ELECT	220MF	20%	10V
C413	1-101-005-00	CERAMIC	0.022MF		50V
C414	1-101-005-00	CERAMIC	0.022MF		50V
C415	1-123-308-00	ELECT	220MF	20%	10V
C416	1-124-468-11	ELECT	100MF	20%	6.3V
C417	1-124-471-00	ELECT	1000MF	20%	6.3V
C501	1-123-308-00	ELECT	220MF	20%	10V
C502	1-101-005-00	CERAMIC	0.022MF		50V
C503	1-102-518-00	CERAMIC	33PF	5%	50V
C504	1-102-518-00	CERAMIC	33PF	5%	50V
C505	1-101-005-00	CERAMIC	0.022MF		50V
C506	1-123-308-00	ELECT	220MF	20%	10V
C507	1-123-616-00	ELECT	4.7MF	20%	25V
C601	1-101-005-00	CERAMIC	0.022MF		50V
C602	1-123-611-00	ELECT	1MF	20%	50V
C603	1-123-611-00	ELECT	1MF	20%	50V

ELECTRICAL PARTS

Ref.No.	Part No.	Descriptrion			
C604	1-123-612-00	ELECT	2.2MF	20%	50V
C605	1-123-308-00	ELECT	220MF	20%	10V
C606	1-123-820-00	ELECT	33MF	20%	16V
C607	1-123-308-00	ELECT	220MF	20%	10V
C608	1-123-308-00	ELECT	220MF	20%	10V
C609	1-123-308-00	ELECT	220MF	20%	10V
C610	1-124-556-11	ELECT	2200MF	20%	16V
C611	1-124-556-11	ELECT	2200MF	20%	16V
C612	1-102-394-00	CERAMIC	0.01MF		250V
C613	1-161-744-00	CERAMIC	0.01MF		400V
C614	1-161-744-00	CERAMIC	0.01MF		400V
C615	1-123-308-00	ELECT	220MF	20%	10V
C616	1-123-820-00	ELECT	33MF	20%	16V
CNJ101	1-507-678-00	JACK			
CNJ102	1-507-914-21	JACK, PIN 6P			
CNJ103	1-507-914-21	JACK, PIN 6P			
CNJ104	1-507-912-11	JACK, PIN 2P			
CNJ105	1-507-914-21	JACK, PIN 6P			
CNJ106	1-507-914-21	JACK, PIN 6P			
CNJ107	1-507-914-21	JACK, PIN 6P			
CNJ108	1-507-914-21	JACK, PIN 6P			
CNJ109	1-507-914-21	JACK, PIN 6P			
CNJ110	1-507-892-61	JACK, PIN 1P			
CNJ111	1-507-914-21	JACK, PIN 6P			
CNJ112	1-507-914-21	JACK, PIN 6P			
CNJ113	1-507-914-21	JACK, PIN 6P			
CNJ114	1-507-914-21	JACK, PIN 6P			
CNJ115	1-507-914-21	JACK, PIN 6P			
CNJ116	1-507-914-21	JACK, PIN 6P			
CNJ117	1-507-914-21	JACK, PIN 6P			
CNJ118	1-507-914-21	JACK, PIN 6P			
CNJ160	1-507-892-51	JACK, PIN 1P			
CNJ301	1-507-678-00	JACK			
CNJ302	1-507-678-00	JACK			
CNJ303*	1-560-039-00	PIN, CONNECTOR			
CNJ304*	1-560-039-00	PIN, CONNECTOR			
CNJ305*	1-560-280-00	CONNECTOR PIN 3P			
CNJ306*	1-560-286-00	CONNECTOR PIN 2P			
CNJ401	1-507-994-11	JACK, PIN (YELLOW)			
CNJ402	1-507-888-00	JACK, PIN 2P			
CNJ403	1-507-888-00	JACK, PIN 2P			
CNJ404	1-507-892-41	JACK, PIN 1P			
CNJ405	1-507-888-00	JACK, PIN 2P			
CNJ406	1-507-888-00	JACK, PIN 2P			
CNJ407	1-507-888-00	JACK, PIN 2P			
CNJ408	1-507-888-00	JACK, PIN 2P			
⚠CNJ601	1-526-751-00	(UK)....OUTLET, AC			
⚠CNJ601	1-526-794-11	(AEP)...OUTLET, AC			
⚠CNJ601	1-526-882-00	(E).....OUTLET, AC			
D201	8-719-301-38	DIODE SEL2210S-C			
D202	8-719-301-38	DIODE SEL2210S-C			
D203	8-719-301-38	DIODE SEL2210S-C			
D204	8-719-301-38	DIODE SEL2210S-C			
D205	8-719-301-38	DIODE SEL2210S-C			
D206	8-719-301-38	DIODE SEL2210S-C			
D207	8-719-301-38	DIODE SEL2210S-C			
D208	8-719-301-38	DIODE SEL2210S-C			
D209	8-719-301-38	DIODE SEL2210S-C			

The components identified by shading and mark ⚠1 are critical for safety. Replace only with part number specified.

ELECTRICAL PARTS

Ref.No.	Part No.	Descriptrion
D210	8-719-301-38	DIODE SEL2210S-C
D211	8-719-301-38	DIODE SEL2210S-C
D301	8-719-107-94	DIODE 1SS202-1
D302	8-719-107-94	DIODE 1SS202-1
D303	8-719-107-94	DIODE 1SS202-1
D304	8-719-107-94	DIODE 1SS202-1
D307	8-719-110-32	DIODE PH302B
D501	8-719-107-94	DIODE 1SS202-1
D502	8-719-107-94	DIODE 1SS202-1
D503	8-719-107-94	DIODE 1SS202-1
D504	8-719-107-94	DIODE 1SS202-1
D505	8-719-107-94	DIODE 1SS202-1
D506	8-719-925-26	DIODE SLP252B-50
D507	8-719-925-26	DIODE SLP252B-50
D508	8-719-300-02	DIODE SV02
D509	8-719-107-94	DIODE 1SS202-1
D510	8-719-107-94	DIODE 1SS202-1
D511	8-719-919-57	DIODE GL-9EG2
D512	8-719-919-57	DIODE GL-9EG2
D513	8-719-919-57	DIODE GL-9EG2
D514	8-719-919-57	DIODE GL-9EG2
D515	8-719-919-57	DIODE GL-9EG2
D516	8-719-919-57	DIODE GL-9EG2
D517	8-719-919-57	DIODE GL-9EG2
D518	8-719-919-57	DIODE GL-9EG2
D519	8-719-919-57	DIODE GL-9EG2
D520	8-719-919-57	DIODE GL-9EG2
D521	8-719-919-57	DIODE GL-9EG2
D522	8-719-904-92	DIODE GL-9HY2
D523	8-719-904-92	DIODE GL-9HY2
D524	8-719-904-92	DIODE GL-9HY2
D525	8-719-904-92	DIODE GL-9HY2
D526	8-719-301-43	DIODE SEL2410E-C
D527	8-719-919-57	DIODE GL-9EG2
D528	8-719-301-38	DIODE SEL2210S-C
D529	8-719-107-94	DIODE 1SS202-1
D530	8-719-107-94	DIODE 1SS202-1
D531	8-719-107-94	DIODE 1SS202-1
D532	8-719-107-94	DIODE 1SS202-1
D533	8-719-200-02	DIODE 10E-2
D601	8-719-107-94	DIODE 1SS202-1
D602	8-719-200-02	DIODE 10E-2
D603	8-719-107-94	DIODE 1SS202-1
D604	8-719-200-02	DIODE 10E-2
D605	8-719-200-02	DIODE 10E-2
D606	8-719-910-68	DIODE HZ6C2L
D608	8-719-910-98	DIODE HZ9C3
D609	8-719-910-98	DIODE HZ9C3
D610 ⚠	8-719-511-20	DIODE S1VB20
F1	1-532-286-00	(AEP,UK)...FUSE, TIME-LAG
IC101	8-759-240-66	IC TC4066BP
IC102	8-759-240-66	IC TC4066BP
IC103	8-759-240-66	IC TC4066BP
IC104	8-759-240-66	IC TC4066BP
IC105	8-759-240-66	IC TC4066BP
IC106	8-759-240-66	IC TC4066BP
IC107	8-759-240-66	IC TC4066BP

ELECTRICAL PARTS

Ref.No.	Part No.	Descriptrion
IC108	8-759-240-66	IC TC4066BP
IC109	8-759-240-66	IC TC4066BP
IC110	8-759-240-66	IC TC4066BP
IC111	8-759-240-66	IC TC4066BP
IC112	8-759-240-66	IC TC4066BP
IC201	8-759-601-02	IC M5218P
IC202	8-759-601-02	IC M5218P
IC203	8-759-601-02	IC M5218P
IC204	8-759-602-31	IC M5209P
IC205	8-759-602-31	IC M5209P
IC206	8-759-801-06	IC LB1423N
IC303	8-759-010-60	IC CX20106
IC401	8-759-240-66	IC TC4066BP
IC402	8-759-240-66	IC TC4066BP
IC501	8-759-603-36	IC M50740A-422SP
IC502	8-759-200-18	IC TC40H042P
Q201	8-729-107-99	TRANSISTOR 2SC3622A-K
Q202	8-729-107-99	TRANSISTOR 2SC3622A-K
Q203	8-729-606-33	TRANSISTOR 2SC2603F
Q204	8-729-103-43	TRANSISTOR 2SB734
Q205	8-729-107-99	TRANSISTOR 2SC3622A-K
Q301	8-729-606-33	TRANSISTOR 2SC2603F
Q302	8-729-117-54	TRANSISTOR 2SA1175
Q303	8-729-900-80	TRANSISTOR DTC114ES
Q304	8-729-606-33	TRANSISTOR 2SC2603F
Q305	8-729-606-33	TRANSISTOR 2SC2603F
Q306	8-729-900-80	TRANSISTOR DTC114ES
Q307	8-729-606-33	TRANSISTOR 2SC2603F
Q308	8-729-606-33	TRANSISTOR 2SC2603F
Q309	8-729-900-80	TRANSISTOR DTC114ES
Q310	8-729-606-33	TRANSISTOR 2SC2603F
Q401	8-729-606-33	TRANSISTOR 2SC2603F
Q402	8-729-606-33	TRANSISTOR 2SC2603F
Q403	8-729-606-33	TRANSISTOR 2SC2603F
Q404	8-729-117-54	TRANSISTOR 2SA1175
Q405	8-729-117-54	TRANSISTOR 2SA1175
Q406	8-729-606-33	TRANSISTOR 2SC2603F
Q407	8-729-606-33	TRANSISTOR 2SC2603F
Q408	8-729-606-33	TRANSISTOR 2SC2603F
Q409	8-729-117-54	TRANSISTOR 2SA1175
Q410	8-729-117-54	TRANSISTOR 2SA1175
Q411	8-729-606-33	TRANSISTOR 2SC2603F
Q412	8-729-606-33	TRANSISTOR 2SC2603F
Q413	8-729-606-33	TRANSISTOR 2SC2603F
Q414	8-729-117-54	TRANSISTOR 2SA1175
Q415	8-729-117-54	TRANSISTOR 2SA1175
Q501	8-729-900-80	TRANSISTOR DTC114ES
Q502	8-729-900-80	TRANSISTOR DTC114ES
Q503	8-729-900-80	TRANSISTOR DTC114ES
Q504	8-729-900-80	TRANSISTOR DTC114ES
Q505	8-729-900-61	TRANSISTOR DTA114ES
Q506	8-729-900-61	TRANSISTOR DTA114ES
Q507	8-729-900-61	TRANSISTOR DTA114ES
Q508	8-729-900-61	TRANSISTOR DTA114ES
Q509	8-729-900-61	TRANSISTOR DTA114ES
Q510	8-729-900-61	TRANSISTOR DTA114ES
Q511	8-729-900-61	TRANSISTOR DTA114ES
Q512	8-729-900-61	TRANSISTOR DTA114ES

The components identified by shading and mark ⚠ are critical for safety. Replace only with part number specified.

ELECTRICAL PARTS

Ref.No.	Part No.	Descriptrion
Q513	8-729-900-61	TRANSISTOR DTA114ES
Q514	8-729-900-61	TRANSISTOR DTA114ES
Q515	8-729-900-80	TRANSISTOR DTC114ES
Q516	8-729-900-61	TRANSISTOR DTA114ES
Q517	8-729-900-61	TRANSISTOR DTA114ES
Q518	8-729-900-61	TRANSISTOR DTA114ES
Q519	8-729-900-61	TRANSISTOR DTA114ES
Q520	8-729-900-61	TRANSISTOR DTA114ES
Q521	8-729-900-61	TRANSISTOR DTA114ES
Q522	8-729-900-80	TRANSISTOR DTC114ES
Q523	8-729-900-80	TRANSISTOR DTC114ES
Q524	8-729-180-93	TRANSISTOR 2SD809
Q525	8-729-900-61	TRANSISTOR DTA114ES
Q526	8-729-900-61	TRANSISTOR DTA114ES
Q527	8-729-900-80	TRANSISTOR DTC114ES
Q528	8-729-180-93	TRANSISTOR 2SD809
Q529	8-729-173-13	TRANSISTOR 2SB731
Q530	8-729-900-80	TRANSISTOR DTC114ES
Q531	8-729-900-61	TRANSISTOR DTA114ES
Q532	8-729-180-93	TRANSISTOR 2SD809
Q533	8-729-900-80	TRANSISTOR DTC114ES
Q534	8-729-900-80	TRANSISTOR DTC114ES
Q535	8-729-900-80	TRANSISTOR DTC114ES
Q536	8-729-900-80	TRANSISTOR DTC114ES
Q537	8-729-900-61	TRANSISTOR DTA114ES
Q538	8-729-900-80	TRANSISTOR DTC114ES
Q539	8-729-900-80	TRANSISTOR DTC114ES
Q540	8-729-900-89	TRANSISTOR DTC144ES
Q601	8-729-606-33	TRANSISTOR 2SC2603-F
Q602	8-729-900-61	TRANSISTOR DTA114ES
Q603	8-729-900-80	TRANSISTOR DTC114ES
Q604	8-729-382-63	TRANSISTOR 2SC1826-Y
Q605	8-729-224-63	TRANSISTOR 2SK246-BL
Q606	8-729-382-63	TRANSISTOR 2SC1826-Y
Q607	8-729-224-63	TRANSISTOR 2SK246-BL
Q608	8-729-283-41	TRANSISTOR 2SB834-O
Q609	8-729-224-63	TRANSISTOR 2SK246-BL

R101	1-249-441-11	CARBON	100K	5%	1/6W
R102	1-249-417-11	CARBON	1K	5%	1/6W
R103	1-249-441-11	CARBON	100K	5%	1/6W
R104	1-249-417-11	CARBON	1K	5%	1/6W
R105	1-249-441-11	CARBON	100K	5%	1/6W
R106	1-249-417-11	CARBON	1K	5%	1/6W
R107	1-249-441-11	CARBON	100K	5%	1/6W
R108	1-249-417-11	CARBON	1K	5%	1/6W
R109	1-249-441-11	CARBON	100K	5%	1/6W
R110	1-249-417-11	CARBON	1K	5%	1/6W
R111	1-249-441-11	CARBON	100K	5%	1/6W
R112	1-249-417-11	CARBON	1K	5%	1/6W
R113	1-249-441-11	CARBON	100K	5%	1/6W
R114	1-249-417-11	CARBON	1K	5%	1/6W
R115	1-249-441-11	CARBON	100K	5%	1/6W
R116	1-249-417-11	CARBON	1K	5%	1/6W
R117	1-249-441-11	CARBON	100K	5%	1/6W
R118	1-249-417-11	CARBON	1K	5%	1/6W
R119	1-249-441-11	CARBON	100K	5%	1/6W
R120	1-247-819-00	CARBON	330	5%	1/6W
R121	1-249-417-11	CARBON	1K	5%	1/6W

ELECTRICAL PARTS

Ref.No.	Part No.	Descriptrion			
R122	1-249-441-11	CARBON	100K	5%	1/6W
R123	1-249-417-11	CARBON	1K	5%	1/6W
R124	1-249-441-11	CARBON	100K	5%	1/6W
R125	1-249-417-11	CARBON	1K	5%	1/6W
R126	1-249-441-11	CARBON	100K	5%	1/6W
R127	1-247-823-00	CARBON	470	5%	1/6W
R128	1-249-441-11	CARBON	100K	5%	1/6W
R129	1-247-823-00	CARBON	470	5%	1/6W
R130	1-249-441-11	CARBON	100K	5%	1/6W
R131	1-247-823-00	CARBON	470	5%	1/6W
R132	1-249-441-11	CARBON	100K	5%	1/6W
R133	1-247-823-00	CARBON	470	5%	1/6W
R134	1-249-441-11	CARBON	100K	5%	1/6W
R135	1-249-429-11	CARBON	10K	5%	1/6W
R136	1-249-429-11	CARBON	10K	5%	1/6W
R152	1-249-417-11	CARBON	1K	5%	1/6W
R153	1-249-441-11	CARBON	100K	5%	1/6W
R154	1-249-417-11	CARBON	1K	5%	1/6W
R155	1-249-441-11	CARBON	100K	5%	1/6W
R156	1-249-417-11	CARBON	1K	5%	1/6W
R157	1-249-441-11	CARBON	100K	5%	1/6W
R158	1-249-417-11	CARBON	1K	5%	1/6W
R159	1-249-441-11	CARBON	100K	5%	1/6W
R160	1-249-417-11	CARBON	1K	5%	1/6W
R161	1-249-441-11	CARBON	100K	5%	1/6W
R162	1-249-417-11	CARBON	1K	5%	1/6W
R163	1-249-441-11	CARBON	100K	5%	1/6W
R164	1-249-417-11	CARBON	1K	5%	1/6W
R165	1-249-441-11	CARBON	100K	5%	1/6W
R166	1-249-417-11	CARBON	1K	5%	1/6W
R167	1-249-441-11	CARBON	100K	5%	1/6W
R168	1-249-417-11	CARBON	1K	5%	1/6W
R169	1-249-441-11	CARBON	100K	5%	1/6W
R170	1-247-819-00	CARBON	330	5%	1/6W
R171	1-249-417-11	CARBON	1K	5%	1/6W
R172	1-249-441-11	CARBON	100K	5%	1/6W
R173	1-249-417-11	CARBON	1K	5%	1/6W
R174	1-249-441-11	CARBON	100K	5%	1/6W
R175	1-249-417-11	CARBON	1K	5%	1/6W
R176	1-249-441-11	CARBON	100K	5%	1/6W
R177	1-247-823-00	CARBON	470	5%	1/6W
R178	1-249-441-11	CARBON	100K	5%	1/6W
R179	1-247-823-00	CARBON	470	5%	1/6W
R180	1-249-441-11	CARBON	100K	5%	1/6W
R181	1-247-823-00	CARBON	470	5%	1/6W
R182	1-249-441-11	CARBON	100K	5%	1/6W
R183	1-247-823-00	CARBON	470	5%	1/6W
R184	1-249-441-11	CARBON	100K	5%	1/6W
R201	1-247-823-00	CARBON	470	5%	1/6W
R202	1-249-441-11	CARBON	100K	5%	1/6W
R203	1-247-845-00	CARBON	3.9K	5%	1/6W
R204	1-247-853-00	CARBON	8.2K	5%	1/6W
R205	1-249-441-11	CARBON	100K	5%	1/6W
R206	1-247-853-00	CARBON	8.2K	5%	1/6W
R207	1-249-441-11	CARBON	100K	5%	1/6W
R208	1-247-823-00	CARBON	470	5%	1/6W
R209	1-247-897-00	CARBON	560K	5%	1/6W

ELECTRICAL PARTS

Ref.No.	Part No.	Descriptrion			
R210	1-249-417-11	CARBON	1K	5%	1/6W
R211	1-249-425-11	CARBON	4.7K	5%	1/6W
R212	1-249-441-11	CARBON	100K	5%	1/6W
R213	1-247-845-00	CARBON	3.9K	5%	1/6W
R214	1-249-429-11	CARBON	10K	5%	1/6W
R215	1-249-429-11	CARBON	10K	5%	1/6W
R216	1-249-429-11	CARBON	10K	5%	1/6W
R217	1-249-429-11	CARBON	10K	5%	1/6W
R218	1-249-429-11	CARBON	10K	5%	1/6W
R219	1-249-429-11	CARBON	10K	5%	1/6W
R220	1-249-429-11	CARBON	10K	5%	1/6W
R221	1-249-441-11	CARBON	100K	5%	1/6W
R222	1-249-429-11	CARBON	10K	5%	1/6W
R223	1-249-429-11	CARBON	10K	5%	1/6W
R224	1-249-429-11	CARBON	10K	5%	1/6W
R225	1-249-429-11	CARBON	10K	5%	1/6W
R226	1-249-441-11	CARBON	100K	5%	1/6W
R227	1-247-799-00	CARBON	47	5%	1/6W
R228	1-249-429-11	CARBON	10K	5%	1/6W
R229	1-249-429-11	CARBON	10K	5%	1/6W
R230	1-249-429-11	CARBON	10K	5%	1/6W
R231	1-249-441-11	CARBON	100K	5%	1/6W
R232	1-249-417-11	CARBON	1K	5%	1/6W
R233	1-247-837-00	CARBON	1.8K	5%	1/6W
R234	1-249-429-11	CARBON	10K	5%	1/6W
R235	1-249-425-11	CARBON	4.7K	5%	1/6W
R236	1-249-429-11	CARBON	10K	5%	1/6W
R237	1-247-799-00	CARBON	47	5%	1/6W
R238	1-247-711-11	CARBON	680	5%	1/4W
R239	1-249-429-11	CARBON	10K	5%	1/6W
R241	1-249-421-11	CARBON	2.2K	5%	1/6W
R242	1-249-425-11	CARBON	4.7K	5%	1/6W
R243	1-249-425-11	CARBON	4.7K	5%	1/6W
R244	1-249-433-11	CARBON	22K	5%	1/6W
R251	1-247-823-00	CARBON	470	5%	1/6W
R252	1-249-441-11	CARBON	100K	5%	1/6W
R253	1-247-845-00	CARBON	3.9K	5%	1/6W
R254	1-247-853-00	CARBON	8.2K	5%	1/6W
R255	1-249-441-11	CARBON	100K	5%	1/6W
R256	1-247-853-00	CARBON	8.2K	5%	1/6W
R257	1-249-441-11	CARBON	100K	5%	1/6W
R258	1-247-823-00	CARBON	470	5%	1/6W
R259	1-247-897-00	CARBON	560K	5%	1/6W
R260	1-249-417-11	CARBON	1K	5%	1/6W
R261	1-249-425-11	CARBON	4.7K	5%	1/6W
R262	1-249-441-11	CARBON	100K	5%	1/6W
R301	1-249-405-11	CARBON	100	5%	1/6W
R302	1-249-417-11	CARBON	1K	5%	1/6W
R303	1-249-429-11	CARBON	10K	5%	1/6W
R304	1-247-887-00	CARBON	220K	5%	1/6W
R305	1-249-417-11	CARBON	1K	5%	1/6W
R306	1-249-433-11	CARBON	22K	5%	1/6W
R307	1-249-429-11	CARBON	10K	5%	1/6W
R308	1-249-425-11	CARBON	4.7K	5%	1/6W
R309	1-249-433-11	CARBON	22K	5%	1/6W
R310	1-249-429-11	CARBON	10K	5%	1/6W
R311	1-249-433-11	CARBON	22K	5%	1/6W

ELECTRICAL PARTS

Ref.No.	Part No.	Descriptrion			
R312	1-249-417-11	CARBON	1K	5%	1/6W
R313	1-249-441-11	CARBON	100K	5%	1/6W
R314	1-249-429-11	CARBON	10K	5%	1/6W
R315	1-249-429-11	CARBON	10K	5%	1/6W
R316	1-249-417-11	CARBON	1K	5%	1/6W
R317	1-249-429-11	CARBON	10K	5%	1/6W
R318	1-247-783-00	CARBON	10	5%	1/6W
R319	1-247-783-00	CARBON	10	5%	1/6W
R320	1-249-425-11	CARBON	4.7K	5%	1/6W
R321	1-249-429-11	CARBON	10K	5%	1/6W
R322	1-249-425-11	CARBON	4.7K	5%	1/6W
R323	1-249-433-11	CARBON	22K	5%	1/6W
R324	1-249-429-11	CARBON	10K	5%	1/6W
R325	1-249-425-11	CARBON	4.7K	5%	1/6W
R326	1-249-417-11	CARBON	1K	5%	1/6W
R330	1-249-433-11	CARBON	22K	5%	1/6W
R331	1-247-886-00	CARBON	200K	5%	1/6W
R332	1-247-775-00	CARBON	4.7	5%	1/6W
R401	1-249-429-11	CARBON	10K	5%	1/6W
R402	1-247-804-00	CARBON	75	5%	1/6W
R403	1-249-429-11	CARBON	10K	5%	1/6W
R404	1-247-804-00	CARBON	75	5%	1/6W
R405	1-249-429-11	CARBON	10K	5%	1/6W
R406	1-247-804-00	CARBON	75	5%	1/6W
R407	1-249-429-11	CARBON	10K	5%	1/6W
R408	1-247-804-00	CARBON	75	5%	1/6W
R409	1-249-429-11	CARBON	10K	5%	1/6W
R410	1-247-804-00	CARBON	75	5%	1/6W
R411	1-249-429-11	CARBON	10K	5%	1/6W
R412	1-249-429-11	CARBON	10K	5%	1/6W
R413	1-249-429-11	CARBON	10K	5%	1/6W
R414	1-249-421-11	CARBON	2.2K	5%	1/6W
R415	1-247-829-00	CARBON	820	5%	1/6W
R416	1-247-799-00	CARBON	47	5%	1/6W
R417	1-249-429-11	CARBON	10K	5%	1/6W
R418	1-247-859-00	CARBON	15K	5%	1/6W
R419	1-249-434-11	CARBON	27K	5%	1/6W
R420	1-247-824-00	CARBON	510	5%	1/6W
R421	1-247-844-00	CARBON	3.6K	5%	1/6W
R422	1-247-843-00	CARBON	3.3K	5%	1/6W
R423	1-249-405-11	CARBON	100	5%	1/6W
R424	1-247-804-00	CARBON	75	5%	1/6W
R425	1-249-417-11	CARBON	1K	5%	1/6W
R426	1-249-429-11	CARBON	10K	5%	1/6W
R427	1-247-859-00	CARBON	15K	5%	1/6W
R428	1-249-434-11	CARBON	27K	5%	1/6W
R429	1-247-824-00	CARBON	510	5%	1/6W
R430	1-249-421-11	CARBON	2.2K	5%	1/6W
R431	1-247-829-00	CARBON	820	5%	1/6W
R432	1-249-405-11	CARBON	100	5%	1/6W
R433	1-247-844-00	CARBON	3.6K	5%	1/6W
R434	1-247-843-00	CARBON	3.3K	5%	1/6W
R435	1-247-799-00	CARBON	47	5%	1/6W
R436	1-247-804-00	CARBON	75	5%	1/6W
R437	1-249-417-11	CARBON	1K	5%	1/6W
R438	1-247-859-00	CARBON	15K	5%	1/6W
R439	1-249-434-11	CARBON	27K	5%	1/6W

ELECTRICAL PARTS

Ref.No.	Part No.	Descriptrion			
R440	1-247-824-00	CARBON	510	5%	1/6W
R441	1-249-421-11	CARBON	2.2K	5%	1/6W
R442	1-247-829-00	CARBON	820	5%	1/6W
R443	1-249-405-11	CARBON	100	5%	1/6W
R444	1-247-844-00	CARBON	3.6K	5%	1/6W
R445	1-247-843-00	CARBON	3.3K	5%	1/6W
R446	1-247-799-00	CARBON	47	5%	1/6W
R447	1-247-804-00	CARBON	75	5%	1/6W
R448	1-249-417-11	CARBON	1K	5%	1/6W
R501	1-249-429-11	CARBON	10K	5%	1/6W
R502	1-249-429-11	CARBON	10K	5%	1/6W
R503	1-249-429-11	CARBON	10K	5%	1/6W
R504	1-249-429-11	CARBON	10K	5%	1/6W
R505	1-247-713-11	CARBON	1K	5%	1/4W
R506	1-247-713-11	CARBON	1K	5%	1/4W
R507	1-247-713-11	CARBON	1K	5%	1/4W
R508	1-247-713-11	CARBON	1K	5%	1/4W
R509	1-247-713-11	CARBON	1K	5%	1/4W
R510	1-247-713-11	CARBON	1K	5%	1/4W
R511	1-247-713-11	CARBON	1K	5%	1/4W
R512	1-247-713-11	CARBON	1K	5%	1/4W
R513	1-247-713-11	CARBON	1K	5%	1/4W
R514	1-249-429-11	CARBON	10K	5%	1/6W
R515	1-249-429-11	CARBON	10K	5%	1/6W
R516	1-249-429-11	CARBON	10K	5%	1/6W
R517	1-249-429-11	CARBON	10K	5%	1/6W
R518	1-249-429-11	CARBON	10K	5%	1/6W
R519	1-249-429-11	CARBON	10K	5%	1/6W
R520	1-249-429-11	CARBON	10K	5%	1/6W
R521	1-249-429-11	CARBON	10K	5%	1/6W
R522	1-249-429-11	CARBON	10K	5%	1/6W
R523	1-249-433-11	CARBON	22K	5%	1/6W
R524	1-249-433-11	CARBON	22K	5%	1/6W
R525	1-249-433-11	CARBON	22K	5%	1/6W
R526	1-249-433-11	CARBON	22K	5%	1/6W
R527	1-249-433-11	CARBON	22K	5%	1/6W
R528	1-249-433-11	CARBON	22K	5%	1/6W
R529	1-249-433-11	CARBON	22K	5%	1/6W
R530	1-249-433-11	CARBON	22K	5%	1/6W
R531	1-249-433-11	CARBON	22K	5%	1/6W
R532	1-249-425-11	CARBON	4.7K	5%	1/6W
R533	1-249-429-11	CARBON	10K	5%	1/6W
R534	1-247-901-00	CARBON	820K	5%	1/6W
R535	1-247-713-11	CARBON	1K	5%	1/4W
R536	1-247-713-11	CARBON	1K	5%	1/4W
R537	1-247-713-11	CARBON	1K	5%	1/4W
R538	1-247-713-11	CARBON	1K	5%	1/4W
R539	1-247-713-11	CARBON	1K	5%	1/4W
R540	1-247-713-11	CARBON	1K	5%	1/4W
R541	1-249-429-11	CARBON	10K	5%	1/6W
R542	1-249-429-11	CARBON	10K	5%	1/6W
R543	1-249-429-11	CARBON	10K	5%	1/6W
R544	1-249-429-11	CARBON	10K	5%	1/6W
R545	1-249-429-11	CARBON	10K	5%	1/6W
R546	1-249-429-11	CARBON	10K	5%	1/6W
R547	1-249-421-11	CARBON	2.2K	5%	1/6W
R548	1-249-429-11	CARBON	10K	5%	1/6W

ELECTRICAL PARTS

Ref.No.	Part No.	Descriptrion				
R549	1-247-783-00	CARBON	10	5%	1/6W	
R550	1-247-795-00	CARBON	33	5%	1/6W	
R551	1-249-425-11	CARBON	4.7K	5%	1/6W	
R552	1-249-429-11	CARBON	10K	5%	1/6W	
R553	1-249-417-11	CARBON	1K	5%	1/6W	
R554	1-249-417-11	CARBON	1K	5%	1/6W	
R555	1-249-417-11	CARBON	1K	5%	1/6W	
R556	1-249-417-11	CARBON	1K	5%	1/6W	
R557	1-249-417-11	CARBON	1K	5%	1/6W	
R558	1-249-421-11	CARBON	2.2K	5%	1/6W	
R559	1-249-421-11	CARBON	2.2K	5%	1/6W	
R560	1-249-421-11	CARBON	2.2K	5%	1/6W	
R561	1-247-192-00	CARBON	10	5%	1/2W	F
R562	1-249-441-11	CARBON	100K	5%	1/6W	
R563	1-247-775-00	CARBON	4.7	5%	1/6W	
R564	1-247-192-00	CARBON	10	5%	1/2W	F
R565	1-247-775-00	CARBON	4.7	5%	1/6W	
R566	1-249-417-11	CARBON	1K	5%	1/6W	
R567	1-249-417-11	CARBON	1K	5%	1/6W	
R568	1-247-717-11	CARBON	2.2K	5%	1/4W	
R569	1-249-425-11	CARBON	4.7K	5%	1/6W	
R570	1-249-425-11	CARBON	4.7K	5%	1/6W	
R571	1-213-129-00	METAL OXIDE	68	5%	1W	F
R572	1-247-706-11	CARBON	330	5%	1/4W	
R573	1-247-713-11	CARBON	1K	5%	1/4W	
R574	1-249-429-11	CARBON	10K	5%	1/6W	
R575	1-249-417-11	CARBON	1K	5%	1/6W	
R576	1-249-417-11	CARBON	1K	5%	1/6W	
R578	1-249-417-11	CARBON	1K	5%	1/6W	
R579	1-249-417-11	CARBON	1K	5%	1/6W	
R580	1-249-433-11	CARBON	22K	5%	1/6W	
R581	1-249-433-11	CARBON	22K	5%	1/6W	
R582	1-249-433-11	CARBON	22K	5%	1/6W	
R583	1-249-433-11	CARBON	22K	5%	1/6W	
R584	1-249-429-11	CARBON	10K	5%	1/6W	
R585	1-249-429-11	CARBON	10K	5%	1/6W	
R586	1-249-433-11	CARBON	22K	5%	1/6W	
R587	1-249-429-11	CARBON	10K	5%	1/6W	
R588	1-249-425-11	CARBON	4.7K	5%	1/6W	
R589	1-247-843-00	CARBON	3.3K	5%	1/6W	
R601	1-249-441-11	CARBON	100K	5%	1/6W	
R602	1-249-429-11	CARBON	10K	5%	1/6W	
R603	1-249-429-11	CARBON	10K	5%	1/6W	
R604	1-249-417-11	CARBON	1K	5%	1/6W	
R605	1-249-417-11	CARBON	1K	5%	1/6W	
R606	1-249-429-11	CARBON	10K	5%	1/6W	
R607	1-247-713-11	CARBON	1K	5%	1/4W	F
R608	1-249-429-11	CARBON	10K	5%	1/6W	
R609	1-249-425-11	CARBON	4.7K	5%	1/6W	
R610	1-249-455-11	CARBON	4.7	5%	1/4W	F
R611	1-247-185-00	CARBON	2.7	5%	1/2W	F
R612	1-247-185-00	CARBON	2.7	5%	1/2W	F
RV201	1-237-083-11	RES, VAR, CARBON 10K				
RV501	1-228-451-00	RES,VAR,CARBON(WITH SW) 100KX2				
RY501	1-515-560-11	RELAY				

ELECTRICAL PARTS

Ref.No.	Part No.	Descriptrion
S00	1-554-303-21	SWITCH, KEY BOARD
S01	1-554-303-21	SWITCH, KEY BOARD
S03	1-552-412-00	SWITCH, KEY BOARD
S10	1-554-303-21	SWITCH, KEY BOARD
S11	1-554-303-21	SWITCH, KEY BOARD
S12	1-554-303-21	SWITCH, KEY BOARD
S13	1-554-303-21	SWITCH, KEY BOARD
S20	1-554-303-21	SWITCH, KEY BOARD
S21	1-554-303-21	SWITCH, KEY BOARD
S22	1-554-303-21	SWITCH, KEY BOARD
S23	1-554-303-21	SWITCH, KEY BOARD
S30	1-554-303-21	SWITCH, KEY BOARD
S31	1-552-412-00	SWITCH, KEY BOARD
S32	1-554-303-21	SWITCH, KEY BOARD
S33	1-554-303-21	SWITCH, KEY BOARD
S201	1-554-547-00	SWITCH, PUSH
S501	1-554-165-00	SWITCH, SLIDE
S502	1-554-165-00	SWITCH, SLIDE
S503	1-554-165-00	SWITCH, SLIDE
S504	1-570-468-11	SWITCH, PUSH (1 KEY)
S601	1-553-318-00	SWITCH, PUSH (AC POWER)(1 KEY)
S702	1-526-576-51	(E)...SELECTOR, POWER VOLTAGE
T601 ⚠	1-448-493-11	(AEP,UK)...TRANSFORMER, POWER
T601 ⚠	1-448-494-11	(E).....TRANSFORMER, POWER
X501	1-567-160-00	OSCILLATOR, CERAMIC

ACCESSORY & PACKING MATERIAL

Part No.	Description
1-463-720-11	(AEP,UK)...REMOTE COMMANDER (RM-910)
1-463-721-11	(E).....REMOTE COMMANDER
1-506-452-11	ADAPTOR, PLUG
1-526-565-00	(E)...AC PLUG ADAPTOR
1-551-734-11	CORD, CONNECTION (RK-74A)
1-551-801-00	CORD, CONNECTION (RK-50A)
1-557-109-21	CORD, CONNECTION (SYNCHRO) 3P
1-557-655-21	CORD, CONNECTION
1-558-233-11	CORD (WITH CONNECTOR)(SIRCS)4P
1-558-360-11	CORD, CONNECTION
1-558-360-21	CORD, CONNECTION
2-353-827-01	CUSHION (LEFT), LOWER
2-353-828-01	CUSHION (RIGHT), LOWER
2-353-829-01	CUSHION (LEFT), UPPER
2-353-830-01	CUSHION (RIGHT), UPPER
3-701-630-00	BAG, POLYETHYLENE
3-703-710-41	STICKER, SONY SYMBOL (12)
3-760-897-11	(AEP,UK,E).....MANUAL, INSTRUCTION
3-760-897-41	(AEP,West Germany)...MANUAL, INSTRUCTION
4-859-064-00	SHEET, PROTECTION
4-907-610-01	JOINT
4-908-335-01	STICKER, AV
4-913-312-01	(AEP,UK)...INDIVIDUAL CARTON
4-913-312-11	(E).....INDIVIDUAL CARTON

The components identified by shading and mark ⚠ are critical for safety. Replace only with part number specified.

9-951-950-11

Sony Corporation

English
86E0547-1
Printed in Japan
© 1986